

## SYSMAC CP-series CP1E CPU Units

### CP1E-E□D□-A

### CP1E-N□D□-□

### The CP1E Package PLCs: Economy, Easy, and Efficient

- The E-type Basic CPU Units provide cost performance and easy application with only basic functionality.
- The N-type Application CPU Units support Programmable Terminal connection, position control, and inverter connection

CP1E-E20DR-A *NEW*CP1E-N40DR-A *NEW*


### Features

- Programming, setting, and monitoring with CX-Programmer.
- Easy connection with computers using commercially available USB cables
- Expansion I/O Units can be used to increase the I/O capacity of a CPU Unit (for CPU Units with 30 or 40 I/O points).
- Expansion Units can be used to add analog I/O or temperature inputs to a CPU Unit with 30 or 40 I/O points.
- Quick-response inputs
- Input interrupts
- Extensive high-speed counter functionality.
- Versatile pulse control (Models with transistor outputs only).
- Execution of origin searches and origin returns using instructions (Models with transistor outputs only).
- PWM output function (Models with transistor outputs only).
- Changing settings with the analog adjusters.
- Built-in RS-232C port on N-type CPU Units.
- A Serial Option Board can be added to N-type CPU Units with 30 or 40 I/O points.


# CP1E-E□D□-A/CP1E-N□D□-□

## System Configuration

### Basic System Configuration Using an E-type CPU Unit

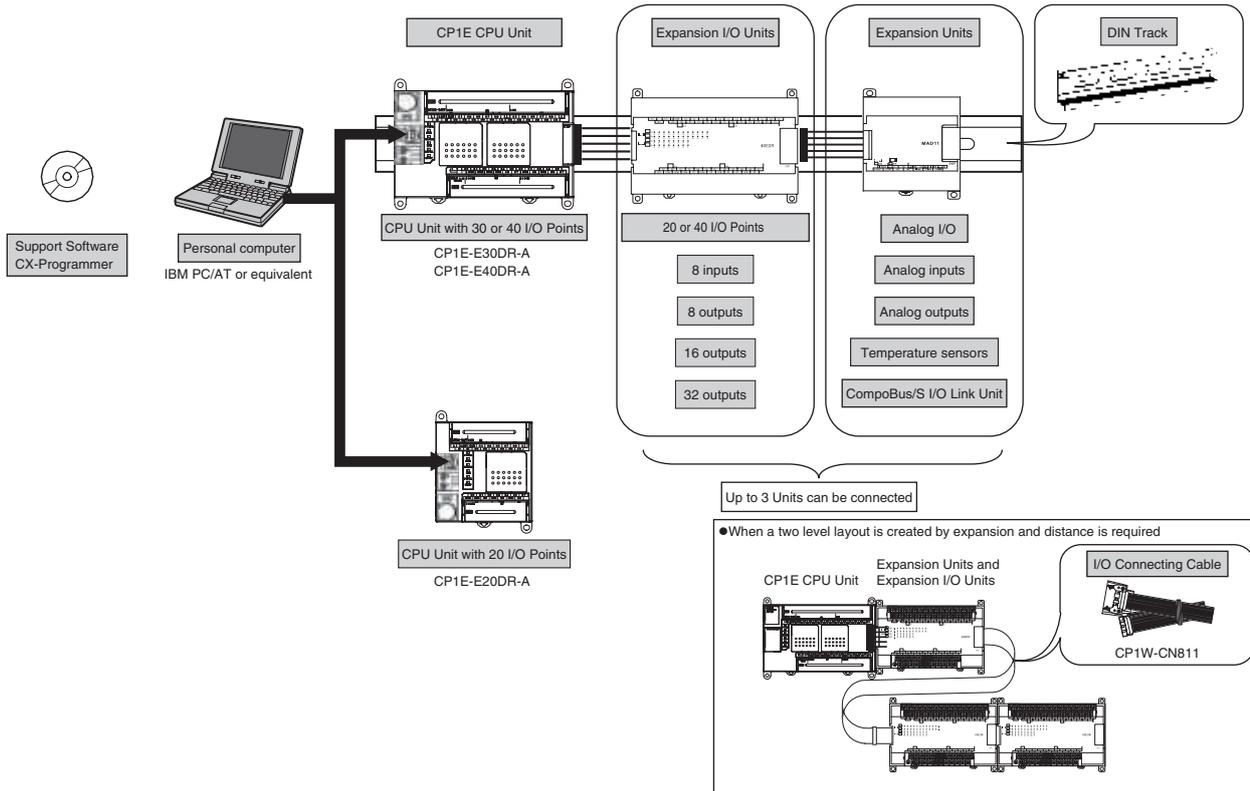

### Basic System Configuration Using an N-type CPU Unit

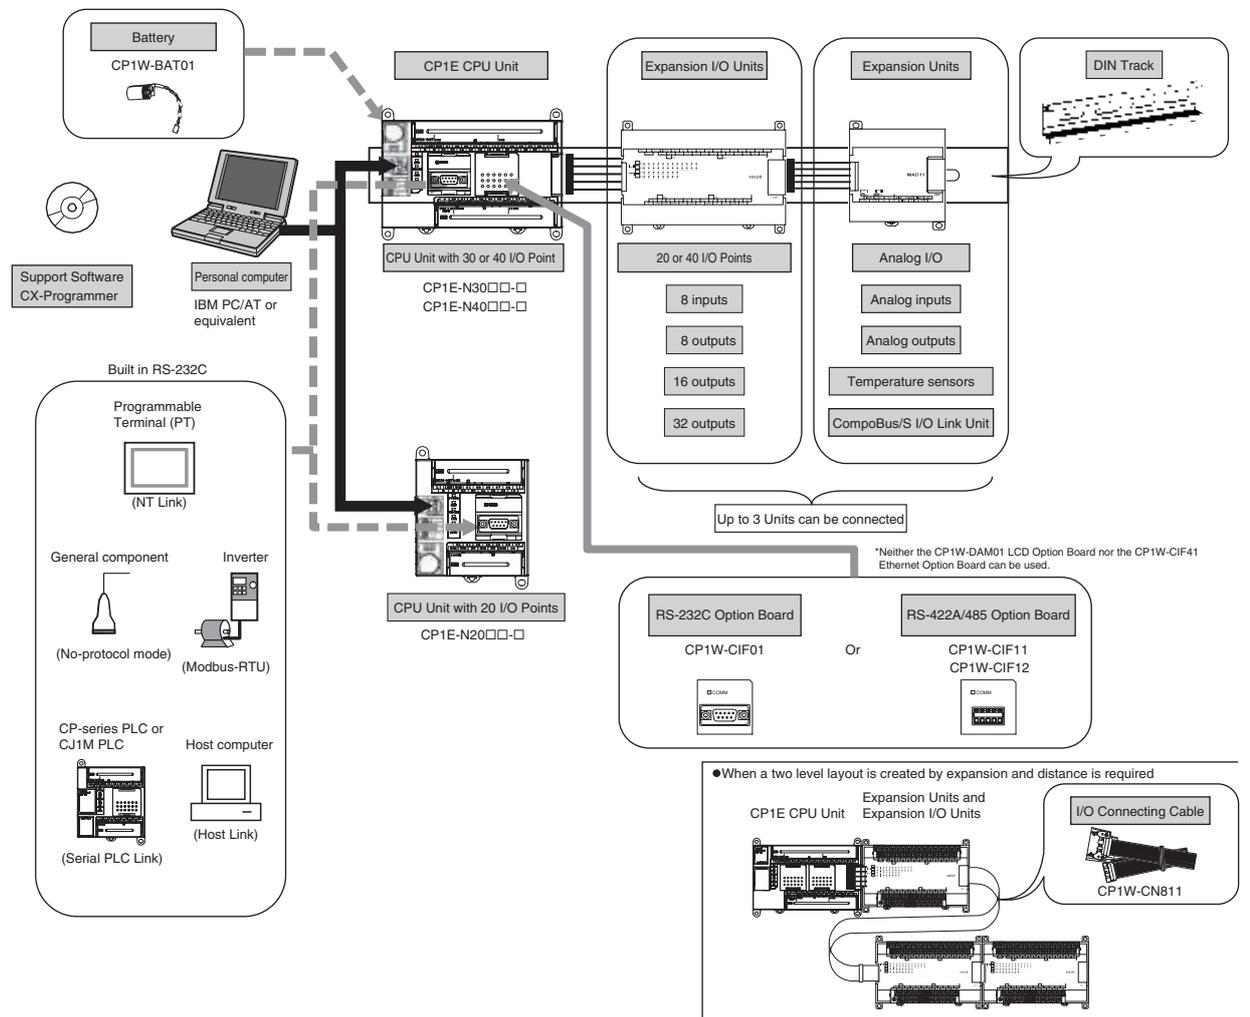


## Ordering Information

### International Standards

- The standards are abbreviated as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

### E-type CP1E CPU Units (Basic Models)
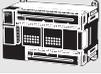
| Product name  | Specifications |        |         |             |                  |                      | External power supply (24 VDC) (A) | Current consumption (A) |      | Model                   | Standards |
|---|----------------|--------|---------|-------------|------------------|----------------------|------------------------------------|-------------------------|------|-------------------------|-----------|
|   | Power Supply   | Inputs | Outputs | Output type | Program capacity | Data memory capacity |                                    | 5 V                     | 24 V |                         |           |
| E-type CPU Units with 20 I/O Points<br>  | 100 to 240 VAC | 12     | 8       | Relay       | 2K steps         | 2K words             | --                                 | 0.17                    | 0.08 | CP1E-E20DR-A <i>NEW</i> | CE        |
| E-type CPU Units with 30 I/O Points<br>  |                | 18     | 12      | Relay       |                  |                      | 0.30                               | 0.17                    | 0.07 | CP1E-E30DR-A <i>NEW</i> |           |
| E-type CPU Units with 40 I/O Points<br> |                | 24     | 16      | Relay       |                  |                      | 0.30                               | 0.17                    | 0.09 | CP1E-E40DR-A <i>NEW</i> |           |

**Note:** There are no accessories included with E-type CP1E CPU Units. A Battery (CP1W-BAT01) cannot be used.

**N-type CP1E CPU Units (Application Models)**

| Product name  | Specifications  |        |         |                       |                  |                      | External power supply (24 VDC) (A) | Current consumption (A) |      | Model                           | Standards |
|---|---|--------|---------|-----------------------|------------------|----------------------|------------------------------------|-------------------------|------|---------------------------------|-----------|
|   | Power Supply  | Inputs | Outputs | Output type           | Program capacity | Data memory capacity |                                    | 5 V                     | 24 V |                                 |           |
| <b>N-type CPU Units with 20 I/O Points</b><br>   | 100 to 240 VAC  | 12     | 8       | Relay                 | 8K steps         | 8K words             | --                                 | 0.18                    | 0.08 | CP1E-N20DR-A <b><i>NEW</i></b>  | CE        |
|   |   |        |         | Transistor (sinking)  |                  |                      | --                                 | 0.23                    | 0.02 | CP1E-N20DT-A <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sourcing) |                  |                      | --                                 | 0.23                    | 0.02 | CP1E-N20DT1-A <b><i>NEW</i></b> |           |
|   | 24 VDC  |        |         | Relay                 |                  |                      | --                                 | 0.18                    | 0.08 | CP1E-N20DR-D <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sinking)  |                  |                      | --                                 | 0.23                    | 0.02 | CP1E-N20DT-D <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sourcing) |                  |                      | --                                 | 0.23                    | 0.02 | CP1E-N20DT1-D <b><i>NEW</i></b> |           |
| <b>N-type CPU Units with 30 I/O Points</b><br>   | 100 to 240 VAC  | 18     | 12      | Relay                 | 8K steps         | 8K words             | 0.30                               | 0.21                    | 0.07 | CP1E-N30DR-A <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sinking)  |                  |                      | 0.30                               | 0.27                    | 0.02 | CP1E-N30DT-A <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sourcing) |                  |                      | 0.30                               | 0.27                    | 0.02 | CP1E-N30DT1-A <b><i>NEW</i></b> |           |
|   | 24 VDC  |        |         | Relay                 |                  |                      | --                                 | 0.21                    | 0.07 | CP1E-N30DR-D <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sinking)  |                  |                      | --                                 | 0.27                    | 0.02 | CP1E-N30DT-D <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sourcing) |                  |                      | --                                 | 0.27                    | 0.02 | CP1E-N30DT1-D <b><i>NEW</i></b> |           |
| <b>N-type CPU Units with 40 I/O Points</b><br> | 100 to 240 VAC  | 24     | 16      | Relay                 | 8K steps         | 8K words             | 0.30                               | 0.21                    | 0.09 | CP1E-N40DR-A <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sinking)  |                  |                      | 0.30                               | 0.31                    | 0.02 | CP1E-N40DT-A <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sourcing) |                  |                      | 0.30                               | 0.31                    | 0.02 | CP1E-N40DT1-A <b><i>NEW</i></b> |           |
|   | 24 VDC  |        |         | Relay                 |                  |                      | --                                 | 0.21                    | 0.09 | CP1E-N40DR-D <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sinking)  |                  |                      | --                                 | 0.31                    | 0.02 | CP1E-N40DT-D <b><i>NEW</i></b>  |           |
|   |   |        |         | Transistor (sourcing) |                  |                      | --                                 | 0.31                    | 0.02 | CP1E-N40DT1-D <b><i>NEW</i></b> |           |
| <b>Battery Set</b><br>                         | For N-type CP1E CPU Units<br><b>Note:</b> Mount a Battery to an N-type CPU Unit if the data in the following areas must be backed up for power interruptions.<br>• DM Area (D) (except backed up words in the DM Area), Holding Area (H), Counter Completion Flags (C), Counter Present Values (C), Auxiliary Area (A), and Clock Function (Use batteries within two years of manufacture.) |        |         |                       |                  |                      |                                    |                         |      | CP1W-BAT01 <b><i>NEW</i></b>    | CE        |

**Note:** There are no accessories included with N-type CP1E CPU Units. RS-232C connectors for the built-in RS-232C port and the Battery (CP1W-BAT01) are not included.

## Options (for N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points)

The Options cannot be used for N-type CPU Units with 20 I/O points and all E-type CPU Units.

| Product name   | Specifications   | Model      | Standards     |
|--|--|------------|---------------|
| <b>RS-232C Option Board</b><br>                   | One RS-232C Option Board can be mounted to the Option Board slot. For N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points only. One RS-232C connector is included. | CP1W-CIF01 | UC1, N, L, CE |
| <b>RS-422A/485 Option Board</b><br>               | One RS-422A/485 Option Board can be mounted to the Option Board slot. For N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points only.                                | CP1W-CIF11 | N, L, CE      |
| <b>RS-422A/485 Isolated-type Option Board</b><br> |  | CP1W-CIF12 |               |

**Note:** It is not possible to use a CP-series Ethernet Option Board (CP1W-CIF41), LCD Option Board (CP1W-DAM01), or Memory Card (CP1W-ME05M) with a CP1E CPU Unit.

## Programming Devices

| Product name   | Specifications   |              | Model  | Standards                    |    |
|--|--|--------------|--------|------------------------------|----|
|  | Number of licenses   | Media        |        |                              |    |
| <b>FA Integrated Tool Package CX-One Lite Ver.4.□</b>                            | CX-One Lite is a subset of the complete CX-One package that provides only the Support Software required for micro PLC applications. CX-One Lite runs on the following OS. Windows 2000 (Service Pack 3 or higher), XP, or Vista CX-One Lite Ver. 4.□ includes Micro PLC Edition CX-Programmer Ver.9.□. The Smart Input function is provided. | 1 license    | CD     | CXONE-LT01C-V4<br><i>NEW</i> | -- |
|  | Micro PLC Edition CX-Programmer can still be ordered individually with the following model number.   |              |        |                              |    |
| <b>Micro PLC Edition CX-Programmer Ver.9.□</b>                                   | Micro PLC Support Software The Smart Input function is provided. OS: Windows 2000 (Service Pack 3 or higher), XP, or Vista Applicable models: CP1□, CPM□□, SRM1  | 1 license    | CD     | WS02-CXPC2-V9<br><i>NEW</i>  | -- |
| <b>CX-One FA Integrated Tool Package Ver. 3.□</b>                                | CX-One is a package that integrates the Support Software for OMRON PLCs and components. CX-One runs on the following OS. OS: Windows 2000 (Service Pack 3 or higher), XP, or Vista CX-One Ver. 3.□ includes CX-Programmer Ver. 8.□.  | 1 license *1 | CD     | CXONE-AL01C-V3<br>*4         | -- |
|  |  |              | DVD *2 | CXONE-AL01D-V3<br>*4         |    |
| CX-Programmer can still be ordered individually with the following model number. |  |              |        |                              |    |
| <b>CX-Programmer Ver. 8. □</b>   | PLC Support Software OS: Windows 2000 (Service Pack 3 or higher), XP, or Vista   | 1 license *3 | CD     | WS02-CXPC1-V8                | -- |

**Note:** The Smart Input function is supported only by Micro PLC Edition CX-Programmer version 9.0 or higher and CX-Programmer for CP1E version 1.0.

\* 1 Site licenses are available for the CX-One (3, 10, 30 or 50 licenses).

\* 2 When purchasing the DVD format, verify the computer model and DVD drive specifications before purchasing.

\* 3 Site licenses are available for the CX-Programmer (3 or 10 licenses).

\* 4 CX-Programmer version 8.2 or higher is required for CP1E PLCs. CX-Programmer version 8.2 is available via a CX-One V3 auto update.

The following tables lists the Support Software that can be installed from CX-One

| Support Software in CX-One              | CX-One Lite Ver.4.0 | CX-One Ver.3.2 | Support Software in CX-One            | CX-One Lite Ver.4.0 | CX-One Ver.3.2 |
|---|---------------------|----------------|---------------------------------------|---------------------|----------------|
| Micro PLC Edition CX-Programmer Ver.9.□ | Yes                 | No             | CX-Drive Ver.1.□                      | Yes                 | Yes            |
| CX-Programmer Ver.8.□                   | No                  | Yes            | CX-Process Tool Ver.5.□               | No                  | Yes            |
| CX-Integrator Ver.2.□                   | Yes                 | Yes            | Faceplate Auto-Builder for NS Ver.3.□ | No                  | Yes            |
| Switch Box Utility Ver.1.□              | Yes                 | Yes            | CX-Designer Ver.3.□                   | Yes                 | Yes            |
| CX-Protocol Ver.1.□                     | No                  | Yes            | NV-Designer Ver.1.□                   | Yes                 | Yes            |
| CX-Simulator Ver.1.□                    | Yes                 | Yes            | CX-Thermo Ver.4.□                     | Yes                 | Yes            |
| CX-Position Ver.2.□                     | No                  | Yes            | CX-ConfiguratorFDT Ver.1.□            | Yes                 | Yes            |
| CX-Motion-NCF Ver.1.□                   | No                  | Yes            | CX-FLnet Ver.1.□                      | No                  | Yes            |
| CX-Motion-MCH Ver.2.□                   | No                  | Yes            | Network Configurator Ver.3.□          | Yes                 | Yes            |
| CX-Motion Ver.2.□                       | No                  | Yes            | CX-Server Ver.4.□                     | Yes                 | Yes            |

**Note:** For details, refer to the CX-One Catalog (Cat. No. R134).

# CP1E-E□D□-A/CP1E-N□D□-□

## Expansion I/O Units and Expansion Units (for E-type CP1E CPU Units with 30 I/O Points or 40 I/O Points and N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points)

E-type CP1E CPU Units with 20 I/O points and N-type CP1E CPU Units with 20 I/O points do not support Expansion I/O Units and Expansion Units.

| Unit type  | Product name  | Specifications   |         |                       | Current consumption (A) |             | Model       | Standards      |                |
|--|---|--|---------|-----------------------|-------------------------|-------------|-------------|----------------|----------------|
|  |   | Inputs   | Outputs | Output type           | 5 V                     | 24 V        |             |                |                |
| CP1W<br>Expansion I/O<br>Units   | Input Unit<br>                   | 8  | --      | --                    | 0.018                   | --          | CP1W-8ED    | U, C, N, L, CE |                |
|  | Output Units<br>                 | --   | 8       | Relay                 | 0.026                   | 0.044       | CP1W-8ER    |                |                |
|  |   |  |         | Transistor (sinking)  | 0.075                   | --          | CP1W-8ET    |                |                |
|  |   |  |         | Transistor (sourcing) | 0.075                   | --          | CP1W-8ET1   |                |                |
|  |                                  | --   | 16      | Relay                 | 0.042                   | 0.090       | CP1W-16ER   |                |                |
|  |   |  |         | Transistor (sinking)  | 0.076                   | --          | CP1W-16ET   |                |                |
|  |   |  |         | Transistor (sourcing) | 0.076                   | --          | CP1W-16ET1  |                |                |
|  |                                  | --   | 32      | Relay                 | 0.049                   | 0.131       | CP1W-32ER   |                |                |
|  |   |  |         | Transistor (sinking)  | 0.113                   | --          | CP1W-32ET   |                |                |
|  |   |  |         | Transistor (sourcing) | 0.113                   | --          | CP1W-32ET1  |                |                |
|  | I/O Units<br>                    | 12   | 8       | Relay                 | 0.103                   | 0.044       | CP1W-20EDR1 |                | U, C, N, L, CE |
|  |   |  |         | Transistor (sinking)  | 0.130                   | --          | CP1W-20EDT  |                |                |
| Transistor (sourcing)  |   |  |         | 0.130                 | --                      | CP1W-20EDT1 |             |                |                |
|                                 |   | 24   | 16      | Relay                 | 0.080                   | 0.090       | CP1W-40EDR  | N, L, CE       |                |
|  |   |  |         | Transistor (sinking)  | 0.160                   | --          | CP1W-40EDT  |                |                |
|  |   |  |         | Transistor (sourcing) | 0.160                   | --          | CP1W-40EDT1 |                |                |
| CP1W<br>Expansion<br>Units   | Analog Input Unit<br>          | 4 analog inputs<br>Input range: 0 to 5 V, 1 to 5 V, 0 to 10 V, $\pm 10$ V,<br>0 to 20 mA, or 4 to 20 mA.<br>Resolution: 1/6000                   |         |                       | 0.100                   | 0.090       | CP1W-AD041  | UC1, N, L, CE  |                |
|  | Analog Output Unit<br>         | 4 analog outputs<br>Output range: 0 to 5 V, 1 to 5 V, 0 to 10 V, $\pm 10$ V,<br>0 to 20 mA, or 4 to 20 mA.<br>Resolution: 1/6000                 |         |                       | 0.080                   | 0.124       | CP1W-DA041  |                |                |
|  | Analog I/O Unit<br>            | 2 analog inputs and 1 analog output<br>I/O range: 0 to 5 V, 1 to 5 V, 0 to 10 V, $\pm 10$ V,<br>0 to 20 mA, or 4 to 20 mA.<br>Resolution: 1/6000 |         |                       | 0.083                   | 0.110       | CP1W-MAD11  |                |                |
|  | Temperature<br>Sensor Unit<br> | 2 temperature sensor inputs<br>Sensor type: Thermocouple (J or K)  |         |                       | 0.040                   | 0.059       | CP1W-TS001  |                |                |
|  |   | 4 temperature sensor inputs<br>Sensor type: Thermocouple (J or K)  |         |                       | 0.040                   | 0.059       | CP1W-TS002  |                |                |
|  |   | 2 temperature sensor inputs<br>Sensor type: Platinum resistance thermometer<br>(Pt100 or JPt100)   |         |                       | 0.054                   | 0.073       | CP1W-TS101  |                |                |
| 4 temperature sensor inputs<br>Sensor type: Platinum resistance thermometer<br>(Pt100 or JPt100)                   |   |  | 0.054   | 0.073                 | CP1W-TS102              |             |             |                |                |
| CompoBus/S<br>I/O Link Unit<br> | CompoBus/S slave<br>8 inputs and 8 outputs  |  |         | 0.029                 | --                      | CP1W-SRT21  |             |                |                |

## I/O Connecting Cable

| Product name         | Specifications   | Model      | Standards     |
|----------------------|--|------------|---------------|
| I/O Connecting Cable | 80 cm (for CP1W Expansion I/O Units and Expansion Units)<br>Only one I/O Connecting Cable can be used in each PLC. | CP1W-CN811 | UC1, N, L, CE |

Note: An I/O Connecting Cable (approx. 6 cm) for horizontal connection is provided with CP1W Expansion I/O Units and Expansion Units.

## General Specifications

| Type                             | AC power supply models  | DC power supply models  |   |
|----------------------------------|---|---|---|
| Model                            | CP1E-□□□□-A   | CP1E-N□□□-D   |   |
| <b>Enclosure</b>                 | Mounted in a panel  |   |   |
| <b>Dimensions (H × D × W)</b>    | CPU Unit with 20 I/O points (CP1E-□20D□-□): 90mm *1 × 85mm *2 × 86 mm<br>CPU Unit with 30 I/O points (CP1E-□30D□-□): 90mm *1 × 85mm *2 × 130 mm<br>CPU Unit with 40 I/O points (CP1E-□40D□-□): 90mm *1 × 85mm *2 × 150 mm |   |   |
| <b>Weight</b>                    | CPU Unit with 20 I/O points (CP1E-□20D□-□): 370g max.<br>CPU Unit with 30 I/O points (CP1E-□30D□-□): 600g max.<br>CPU Unit with 40 I/O points (CP1E-□40D□-□): 660g max.   |   |   |
| <b>Electrical specifications</b> | <b>Supply voltage</b>   | 100 to 240 VAC 50/60 Hz   | 24 VDC  |
|                                  | <b>Operating voltage range</b>  | 85 to 264 VAC   | 20.4 to 26.4 VDC  |
|                                  | <b>Power consumption</b>  | 15 VA/100 VAC max. (CP1E-□20D□-A)<br>25 VA/240 VAC max. (CP1E-□30D□-A)<br>50 VA/100 VAC max. (CP1E-□30D□-A/□40D□-A)<br>70 VA/240 VAC max. (CP1E-□30D□-A/□40D□-A)  | 13 W max. (CP1E-N20D□-D)<br>20 W max. (CP1E-N30D□-D/N40D□-D) *4 |
|                                  | <b>Inrush current</b>   | 120 VAC, 20 A for 8 ms max. for cold start at room temperature<br>240 VAC, 40 A for 8 ms max. for cold start at room temperature  | 30 A max. (for cold start) 20ms max.                            |
|                                  | <b>External power supply *3</b>   | None (CP1E-□20D□-A)<br>300 mA 24 VDC (CP1E-□30D□-A/□40D□-A)   | None  |
|                                  | <b>Insulation resistance</b>  | 20 MΩ min. (at 500 VDC) between the external AC terminals and GR terminals  | No insulation between primary and secondary DC power supplies.  |
|                                  | <b>Dielectric strength</b>  | 2,300 VAC 50/60Hz for 1 min between AC external and GR terminals Leakage current: 5 mA max.   | No insulation between primary and secondary DC power supplies.  |
|                                  | <b>Power OFF detection time</b>   | 10 ms min.  | 2 ms min.   |
| <b>Application environment</b>   | <b>Ambient operating temperature</b>  | 0 to 55 °C  |   |
|                                  | <b>Ambient humidity</b>   | 10% to 90%  |   |
|                                  | <b>Atmosphere</b>   | No corrosive gas.   |   |
|                                  | <b>Ambient storage temperature</b>  | -20 to 75 °C (excluding battery)  |   |
|                                  | <b>Altitude</b>   | 2,000 m max.  |   |
|                                  | <b>Pollution degree</b>   | 2 or less: Conforms to JIS B3502 and IEC 61131-2.   |   |
|                                  | <b>Noise resistance</b>   | 2 kV on power supply line (Conforms to IEC61000-4-4.)   |   |
|                                  | <b>Overvoltage category</b>   | Category II: Conforms to JIS B3502 and IEC 61131-2.   |   |
|                                  | <b>EMC Immunity Level</b>   | Zone B  |   |
|                                  | <b>Vibration resistance</b>   | Conforms to JIS 60068-2-6.<br>5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz<br>Acceleration of 9.8 m/s <sup>2</sup> for 100 min in X, Y, and Z directions (10 sweeps of 10 min each = 100 min total) |   |
| <b>Shock resistance</b>          | Conforms to JIS 60068-2-27.<br>147 m/s <sup>2</sup> , 3 times in X, Y, and Z directions   |   |   |
| <b>Terminal block</b>            | Fixed (not removable)   |   |   |
| <b>Terminal screw size</b>       | M3  |   |   |
| <b>Applicable standards</b>      | EC Directive  |   |   |
| <b>Grounding method</b>          | Ground to 100 Ω or less.  |   |   |

\* 1 Total of 110 mm with mounting brackets.

\* 2 Excluding cables.

\* 3 Use the external power supply to power input devices. Do not use it to drive output devices.

\* 4 This is the rated value for the maximum system configuration. Use the following formula to calculate power consumption for CPU Units with DC power.

Formula: DC power consumption = (5V current consumption × 5 V/70% (internal power efficiency) + 24V current consumption) × 1.1 (current fluctuation factor)

The above calculation results show that a DC power supply with a greater capacity is required.

# CP1E-E□D□-A/CP1E-N□D□-□

## Performance Specifications

| Item  |   | CP1E-   |   |  |  |  |  |  |
|---|---|---|---|--|--|--|--|--|
|   |   | E20DR-A   | E30DR-A   | E40DR-A                                | N20D□-□  | N30D□-□  | N40D□-□                                |  |
| Program capacity                                |   | 2 K steps (8 Kbytes) including the symbol table, comments, and program indices of the CX-Programmer |   |  | 8 K steps (32 Kbytes) including the symbol table, comments, and program indices of the CX-Programmer |  |  |  |
| Control method                                  |   | Stored program method   |   |  |  |  |  |  |
| I/O control method                              |   | Cyclic scan with immediate refreshing   |   |  |  |  |  |  |
| Program language                                |   | Ladder diagram  |   |  |  |  |  |  |
| Instructions                                    |   | Approximately 200   |   |  |  |  |  |  |
| Processing speed                                | Overhead processing time                            | 0.4 ms  |   |  |  |  |  |  |
|   | Instruction execution times                         | Basic instructions (LD): 1.19 μs min.<br>Special instructions (MOV): 7.9 μs min.                    |   |  |  |  |  |  |
| Number of CP1W-series Expansion Units connected |   | None  | 3 Units   |  | None   | 3 Units  |  |  |
| Maximum number of I/O points                    |   | 20  | 150<br>(30 built in, 40 x 3 expansion)  | 160<br>(40 built in, 40 x 3 expansion) | 20   | 150<br>(30 built in, 40 x 3 expansion)   | 160<br>(40 built in, 40 x 3 expansion) |  |
| Built-in I/O                                    |   | 20<br>12 inputs<br>8 outputs  | 30<br>18 inputs<br>12 outputs   | 40<br>24 inputs<br>16 outputs          | 20<br>12 inputs<br>8 outputs   | 30<br>18 inputs<br>12 outputs  | 40<br>24 inputs<br>16 outputs          |  |
| Built-in input functions                        | High-speed counters                                 | High-speed counter mode/<br>maximum frequency   | Incremental Pulse Inputs<br>10 kHz: 6 counters<br>Up/Down Inputs<br>10 kHz: 2 counters<br>Pulse + Direction Inputs<br>10 kHz: 2 counters<br>Differential Phase Inputs (4x)<br>5 kHz: 2 counters |  |  | Incremental Pulse Inputs<br>100 kHz: 2 counters, 10 kHz: 4 counters<br>Up/Down Inputs<br>100 kHz: 1 counters, 10 kHz: 1 counters<br>Pulse + Direction Inputs<br>100 kHz: 2 counters<br>Differential Phase Inputs (4x)<br>50 kHz: 1 counter, 5 kHz: 1 counter |  |  |
|   |   | Counting mode   | Linear mode<br>Ring mode  |  |  |  |  |  |
|   |   | Count value   | 32 bits   |  |  |  |  |  |
|   |   | Counter reset modes   | Phase Z and software reset (excluding increment pulse input)<br>Software reset  |  |  |  |  |  |
|   | Control method                                      | Target Matching<br>Range Comparison   |   |  |  |  |  |  |
|   | Input interrupts                                    | 6 inputs (interrupt input pulse width: 50 μs min.)  |   |  |  |  |  |  |
|   | Quick-response Inputs                               | 6 inputs (input pulse width: 50 μs min.)  |   |  |  |  |  |  |
|   | Normal input  | Input constants   | Delays can be set in the PLC Setup (0 to 32 ms, default: 8 ms).<br>Set values: 0, 1, 2, 4, 8, 16, or 32 ms  |  |  |  |  |  |
| Built-in output functions                       | Pulse outputs (Models with transistor outputs only) | Pulse output method and output frequency  | No pulse output function  |  |  | Pulse + Direction Mode<br>1 Hz to 100 kHz: 2 outputs   |  |  |
|   |   | Output mode   |   |  |  | Continuous mode (for speed control)<br>Independent mode (for position control)   |  |  |
|   |   | Number of output pulses   |   |  |  | Relative coordinates: 0000 0000 to 7FFF FFFF hex (0 to 2147483647)<br>Absolute coordinates: 8000 0000 to 7FFF FFFF hex (-2147483647 to 2147483647)   |  |  |
|   |   | Acceleration/deceleration curves  |   |  |  | Trapezoidal acceleration and deceleration (Cannot perform S-curve acceleration and deceleration.)  |  |  |
|   |   | Changing SVs during instruction execution   |   |  |  | Only target position can be changed.   |  |  |
|   |   | Origin searches   |   |  |  | Included   |  |  |
|   | Pulse outputs (Models with transistor outputs only) | Frequency   | PWM output function not included  |  |  | 2.0 to 6,553.5 Hz (in increments of 0.1 Hz) with 1 output<br>or 2 Hz to 32,000 Hz (in increments of 1 Hz) with 1 output  |  |  |
|   |   | Duty factor   |   |  |  | 0.0% to 100.0% (in increments of 0.1%)<br>Accuracy: +1%/-0% at 2 Hz to 10,000 Hz and<br>+5%/-0% at 10,000 Hz to 32,000 kHz   |  |  |
|   |   | Output mode   |   |  |  | Continuous Mode  |  |  |
|   | Analog adjusters                                    |   | 2 adjusters (Setting range: 0 to 255)   |  |  |  |  |  |

| Item                                |  | CP1E-   |   |         |  |         |         |
|-------------------------------------|--|---|---|---------|--|---------|---------|
|                                     |  | E20DR-A   | E30DR-A   | E40DR-A | N20D□-□  | N30D□-□ | N40D□-□ |
| Communications                      | Peripheral USB Port                                      | Conforming to USB 2.0 B type  |   |         |  |         |         |
|                                     |  | Transmission distance   | 5 m max.  |         |  |         |         |
|                                     | Built-in RS-232C port                                    | No built-in RS-232C port  |   |         | Interface: Conforms to EIA RS-232C.  |         |         |
|                                     |  | Communications method   | Half duplex   |         |  |         |         |
|                                     |  | synchronization   | Start-stop  |         |  |         |         |
|                                     |  | Baud rate   | 1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6, or 115.2 kbps   |         |  |         |         |
|                                     |  | Transmission distance   | 15 m max.   |         |  |         |         |
|                                     |  | Supported protocol  | <ul style="list-style-type: none"> <li>• Host Link</li> <li>• 1:N NT Link</li> <li>• No-protocol mode</li> <li>• Serial PLC Link Slave, Serial PLC Link Master</li> <li>• Modbus-RTU Easy Master</li> </ul> |         |  |         |         |
|                                     | Serial Option port                                       | Option Board cannot be mounted.   |   |         | 1 port   |         |         |
|                                     |  | Mountable Option Boards   | <ul style="list-style-type: none"> <li>• CP1W-CIF01<br/>One RS-232C port</li> <li>• CP1W-CIF11<br/>One RS-422A/485 port</li> <li>• CP1W-CIF12<br/>One RS-422A/485 port (isolated)</li> </ul>                |         |  |         |         |
|                                     | Communications method                                    | Depends on Option Board.  |   |         |  |         |         |
|                                     | synchronization  | Depends on Option Board.  |   |         |  |         |         |
|                                     | Baud rate  | 1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6, or 115.2 kbps   |   |         |  |         |         |
|                                     | Compatible protocols                                     | <ul style="list-style-type: none"> <li>• Host Link</li> <li>• 1:N NT Link</li> <li>• No-protocol mode</li> <li>• Serial PLC Link Slave, Serial PLC Link Master</li> <li>• Modbus-RTU Easy Master</li> </ul>   |   |         |  |         |         |
| Number of tasks                     |  | 17 <ul style="list-style-type: none"> <li>• One cyclic execution task</li> <li>• One scheduled interrupt task (always interrupt task 1)</li> <li>• Six input interrupt tasks (interrupt tasks 2 to 7)</li> <li>• Sixteen high-speed counter interrupt tasks (interrupt tasks 1 to 16)</li> </ul>  |   |         |  |         |         |
| Maximum subroutine number           |  | 128   |   |         |  |         |         |
| Maximum jump number                 |  | 128   |   |         |  |         |         |
| Scheduled interrupt tasks           |  | 1 interrupt task  |   |         |  |         |         |
| Clock                               |  | Clock function not included.  |   |         | Included.<br>Accuracy (monthly deviation):<br>-4.5 min to -0.5 min at ambient temperature of 55°C,<br>-2.0 min to +2.0 min at ambient temperature of 25°C,<br>-2.5 min to +1.5 min at ambient temperature of 0°C                                       |         |         |
| Memory backup                       | Built-in EEPROM  | Ladder programs and parameters are automatically saved to built-in EEPROM<br>A section of the Data Memory Area can be saved to the built-in EEPROM.   |   |         |  |         |         |
|                                     | Battery backup With CP1W-BAT01 Battery (Sold separately) | Battery cannot be mounted.  |   |         | CP1W-BAT01 can be used.<br>Maximum battery service life: 5 years<br>Backup Time<br>Guaranteed value (ambient temperature: 55°C):<br>13,000 hours (approx. 1.5 years)<br>Effective value (ambient temperature: 25°C):<br>43,000 hours (approx. 5 years) |         |         |
| CIO Area                            | Input Bits   | 1,600 bits (100 words): CIO 0.00 to CIO 99.15 (CIO 00 to CIO 99)  |   |         |  |         |         |
|                                     | Output Bits  | 1,600 bits (100 words): CIO 100.00 to CIO 199.15 (CIO 100 to CIO 199)   |   |         |  |         |         |
|                                     | Serial PLC Link Words                                    | 1,440 bits (90 words): CIO 200.00 to CIO 289.15 (words CIO 200 to CIO 289)  |   |         |  |         |         |
| Work Area (W)                       |  | 1,600 bits (100 words): W0.00 to W99.15 (W0 to W99)   |   |         |  |         |         |
| Holding Area (H)                    |  | 800 bits (50 words): H0.00 to H49.15 (H0 to H49)<br>The bits and words in this area are used only in programming. Bit ON/OFF status will be retained when the operating mode is changed.  |   |         |  |         |         |
| Auxiliary Area (A)                  |  | Read-only: 7,168 bits (448 words) A0 to A447<br>Read/write: 4,896 bits (306 words) in words A448 to A753  |   |         |  |         |         |
| Temporary Relay Area (TR) (TR Area) |  | 16 bits: TR0 to TR15  |   |         |  |         |         |
| Timer Area (T)                      |  | 256 timer numbers (T0000 to T255 (separate from counters))  |   |         |  |         |         |
| Counter Area (C)                    |  | 256 counter numbers (C0000 to C255 (separate from timers))  |   |         |  |         |         |
| Data Memory Area (D)                |  | 2 Kwords: D0 to D2047<br>Of these, 1,500 words can be saved to the backup memory (built-in EEPROM) using settings in the Auxiliary Area.  |   |         | 8 Kwords: D0 to D8191<br>Of these, 7,000 words can be saved to the backup memory (built-in EEP-ROM) using settings in the Auxiliary Area   |         |         |
| Operating modes                     |  | PROGRAM mode: Program execution is stopped.<br>Preparations can be executed prior to program execution in this mode.<br>MONITOR mode: Programs are executed.<br>Some operations, such as online editing, and changes to present values in I/O memory, are enabled in this mode.<br>RUN mode: Programs are executed.<br>This is the normal operating mode. |   |         |  |         |         |

# Function Specifications


| Function                                |   | Function description   |  |   |   |
|---|---|--|--|---|---|
| Cycle time management                   | Minimum cycle time  |  | Makes the cycle time consistent.   |   |   |
|   | Monitoring the cycle time   |  | Monitors the cycle time.   |   |   |
| CPU Unit built-in functions             | Inputs  | High-speed counter inputs  | High-speed pulse inputs  | High-speed pulses from devices such as a rotary encoder are counted. The counted values are stored in the Auxiliary Area. Interrupt tasks can be executed when target is reached or by range comparison.  |   |
|   |   |  | Input pulse frequency measurement  | The frequency of pulses input by the PRV instruction is measured.   |   |
|   |   | Interrupt inputs   |  | Relevant interrupt tasks are executed during the cycle when the CPU Unit built-in inputs turn ON or turn OFF.   |   |
|   |   | Quick-response inputs  |  | Inputs can be read without being affected by cycle time. Use the quick-response inputs to read signals shorter than the cycle time.   |   |
|   |   | Normal inputs  | I/O refreshing   | Cyclic refreshing   | The CPU Unit's built-in I/O are cyclically refreshed. |
|   |   |  |  | Immediate refreshing  | I/O refreshing by immediate refreshing instructions   |
|   | Input response times  |  | Input constants can be set for Basic I/O Units. The response time can be increased to reduce the effects of chattering and noise at input contacts. The response time can be decreased to enable detecting shorter input pulses. |   |   |
|   | Outputs   | Pulse outputs (Models with transistor outputs only)  | Pulse control  | A pulse signal is output and positioning or speed control is performed with a servo driver that accepts a pulse input. Continuous mode for speed control or independent mode for position control can be used. There are functions for changing to positioning during speed control and for changing the target value during positioning. |   |
|   |   |  | Origin positioning   | Origin searches and origin returns  |   |
|   |   | PWM outputs (Models with transistor outputs only)  |  | Pulses for which the duty ratio (ratio between ON time and OFF time during one pulse cycle) can be set are output.  |   |
| Normal outputs                          |   | Load OFF function  | All of the outputs on the CPU Unit's I/O can be turned OFF when an error occurs in RUN or MONITOR mode.  |   |   |
| Expansion I/O Units and Expansion Units | Functions supported by both Expansion I/O Unit and Expansion Unit | I/O refreshing   | Cyclic refreshing  | The Expansion I/O Units and Expansion Units are cyclically refreshed.   |   |
|   |   |  | Refreshing by IORF   | I/O refreshing by IORF instruction  |   |
|   | Load OFF function   |  | All of the outputs on Expansion I/O Units and Expansion Units are turned OFF (0000 hex) when an error occurs in RUN or MONITOR mode.   |   |   |
|   | Expansion I/O Units   | Input response times   | The response time can be increased to reduce the effects of chattering and noise at input contacts. The response time can be decreased to enable detecting shorter input pulses.   |   |   |
| Expansion Units                         | Unit error detection  | Errors in Expansion Units are detected. The CPU Unit is notified that the Expansion Unit stopped due to an error.                                      |  |   |   |
| Memory management functions             | Holding I/O memory when changing operating modes                  |  | The status of I/O memory can be held when the operating mode is changed. The forced-set/reset status can be held when the operating mode is changed.   |   |   |
|   | Automatic backup to the backup memory (built-in EEPROM)           |  | Automatic backup of ladder programs and parameter area to the backup memory (built-in EEPROM)  |   |   |
| Communications                          |   |  |  |   |   |
| Peripheral USB port                     | Peripheral bus (toolbus)  |  | Port for communications with computer (CX-Programmer)  |   |   |
|   | Serial port (CP1E-N□D□-□ only)                                    |  | --   |   |   |
|   | Host Link (SYSWAY) communications                                 |  | Host Link command can be sent to Host Computer or PT to read/write I/O memory, read/control the operating mode, and perform other operations for PLC.  |   |   |
|   | No-protocol communications  |  | I/O instructions for communications ports (TXD/RXD instructions) can be used for data transfer with peripheral devices such as bar code readers.   |   |   |
|   | NT Link communications  |  | I/O memory in the PLC can be allocated and directly linked to various PT functions, including status control areas, status notification areas, touch switches, lamps, memory tables, and other objects.                          |   |   |
|   | Serial PLC Links  |  | Up to ten words per Unit can be shared by up to nine CPU Units, including one Polling Unit and eight Polled Units.<br><b>Note:</b> Programmable Terminal (PT) cannot be connected.   |   |   |
| Modbus-RTU Easy Master function         |   | Modbus-RTU commands are sent by the Modbus-RTU Master function. Modbus slaves, such as inverters, can be easily controlled with serial communications. |  |   |   |
| Interrupt                               | Scheduled interrupts  |  | Tasks can be executed at a specified interval (1.0 ms min., Unit: 0.1 ms).   |   |   |
|   | Interrupt inputs  |  | Interrupt tasks are processed when the built-in input turns ON or OFF.   |   |   |
|   | High-speed counter interrupts                                     |  | This function counts input pulses with the CPU Unit's built-in high-speed counter and executes an interrupt task when the count reaches the preset value or falls within a preset range (target value or zone comparison).       |   |   |

| Function   |                                       | Function description  |   |   |
|--|---------------------------------------|---|---|---|
| Power supply management                                | Memory protection                     | Holding Area data, DM Area data, EM Area data, Counter Completion Flags, and counter present values are held even when power is turned OFF.<br>This function can be used only with an N-type CPU Unit and only when the Battery Set (sold separately) is mounted. |   |   |
|  | Number of power interruptions counter | The number of times power has been interrupted is counted.  |   |   |
| Debugging  | Online editing                        | The program can be changed during operation in MONITOR mode or PROGRAM mode.  |   |   |
|  | Force-set/reset                       | Specified bits can be set or reset.   |   |   |
|  | Differentiate monitoring              | ON/OFF changes in specified bits can be monitored.  |   |   |
|  | Storing the stop position at errors   | The location and task number where execution stopped for a program error is recorded.   |   |   |
|  | Program check                         | The programs can be checked for items such as no END instruction and FALS/FAL errors at startup.  |   |   |
| Self-diagnosis and restoration                         | Error Log                             | Details and the time of occurrence of error codes predefined by the CPU Unit are stored.  |   |   |
|  | CPU error detection                   | CPU Unit WDT errors are detected.   |   |   |
|  | User-defined failure diagnosis        | Errors can be generated for user-specified conditions:<br>Non-fatal errors (FAL) and fatal errors (FALS).   |   |   |
|  | Load OFF function                     | The built-in outputs, Expansion I/O Unit outputs, and Expansion Unit outputs are turned OFF.  |   |   |
|  | Non-fatal error detection             | System FAL error detection (User-defined non-fatal error)   | This function generates a non-fatal (FAL) error when the user-defined conditions are met in program.  |   |
|  |                                       | Backup memory error detection   | This function detects when data in the backup memory (built-in EEPROM) that stores the ladder program is corrupted.   |   |
|  |                                       | PLC Setup error detection   | This function detects setting errors in the PLC Setup.  |   |
|  |                                       | Option Board errors   | This function detects when the Option Board is malfunctioning or disconnected.  |   |
|  |                                       | Battery error detection (N-type CPU Units only)   | This function detects when the battery voltage is low or the battery is disconnected.<br><b>Note:</b> This function is valid only when a battery is mounted and the <b>Do not detect battery error</b> Check Box is cleared in the PLC Setup. |   |
|  | Fatal Error Detection                 | Memory error detection  | This function detects errors that occur in memory of the CPU Unit.  |   |
|  |                                       | I/O bus error detection   | This function detects errors that occur during data transfer between the CPU Unit and another Unit.   |   |
|  |                                       | Too Many I/O Points Error Detection   | This function detects when more than the maximum number of CP1W Expansion I/O Units and Expansion Units are connected to the PLC.   |   |
|  |                                       | Program error detection   | Program error detection   | This function detects when there is an error in the program.<br>See the following for details.  |
|  |                                       |   | Instruction processing error detection  | This function detects an error when the given data value is invalid when executing an instruction, or execution of instruction between tasks was attempted. |
|  |                                       |   | Indirect DM addressing BCD error  | This function detects an error when an indirect DM/EM address in BCD mode is not BCD.   |
|  |                                       |   | Illegal area access error detection   | This function detects an error when an attempt is made to access an illegal area with an instruction operand.   |
|  |                                       |   | No END error detection  | This function detects an error when there is no END instruction at the end of the program.  |
|  |                                       |   | Task error detection  | The execution condition for an interrupt task was met but there is no interrupt task with the specified number.   |
|  |                                       |   | overflow error detection  | This function detects an error when too many differentiated instructions are entered or deleted during online editing (131,072 times or more).              |
|  |                                       |   | Invalid instruction error detection   | This function detects an error when an attempt is made to execute an instruction that is not defined in the system.   |
| User program area overflow error detection             |                                       |   | This function detects an error when instruction data is stored after the last address in user program area.   |   |
| Cycle time exceeded error detection                    |                                       | This function monitors the cycle time (10 to 1,000 ms) and stops the operation when the set value is exceeded.  |   |   |
| System FALS error detection (user-defined fatal error) |                                       | This function generates a fatal (FALS) error when the user-defined conditions are met in program.   |   |   |
| Maintenance  |                                       | Automatic online connection via network   | This function enables automatically connecting to the PLC online when the CX-Programmer is directly connected by a serial connection (peripheral USB port or serial port).  |   |
| Security functions                                     | Read protection using password        | This function protects user memory.<br>Read protection: Set a password using the CX-Programmer.<br>Overwrite protection is not provided.  |   |   |
|  | Write protection from FINS commands   | This function prohibits writing by using FINS commands sent over the network.   |   |   |

## Internal Memory in the CPU Units

### CPU Unit Memory Backup

As shown in the following diagram, the internal memory in the CPU Unit consists of built-in RAM and built-in EEPROM. The built-in RAM is used as execution memory and the built-in EEPROM is used as backup memory.

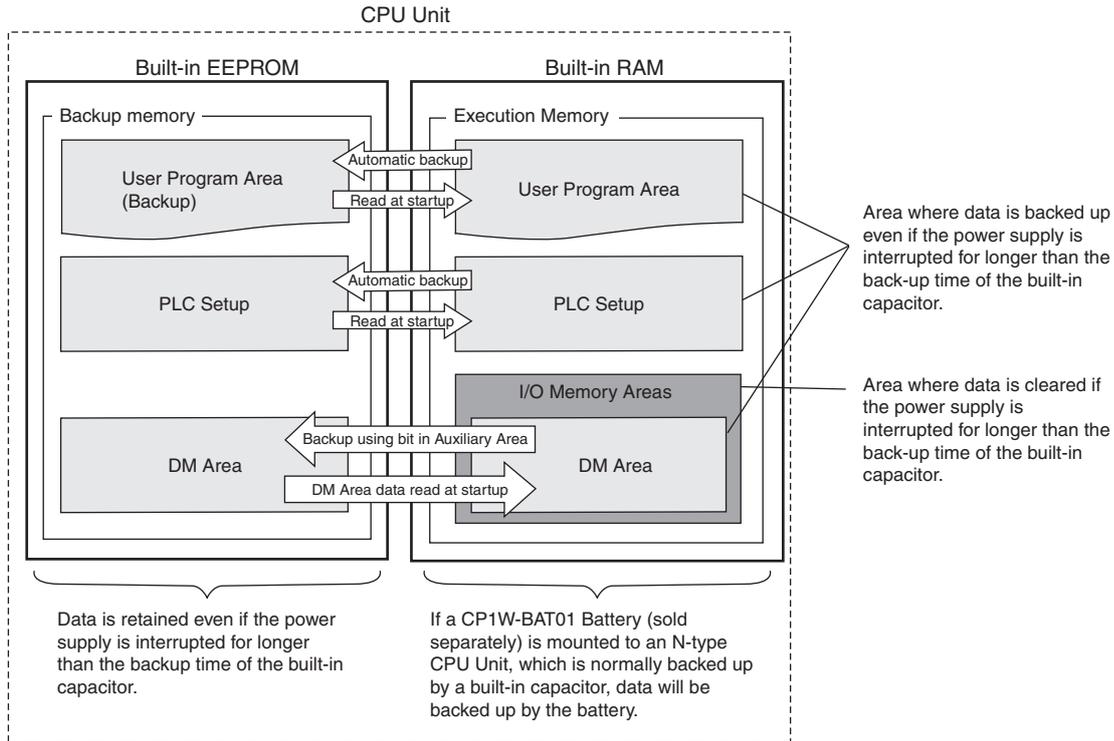


### ●Precautions for Correct Use

Create a system and write the ladder programs so that problems will not occur in the system if the data in these areas may be unstable.


- Data in areas such as the DM area (D), Holding Area (H), the Counter Present Values (C) and the status of Counter Completion Flags (C), which is retained by the battery, may be unstable when the power supply is turned off (Except for the DM area that are retained by the built-in EEPROM using the Auxiliary Area bit.)
- The error log, and clock data (N-type CPU Unit only) in the Auxiliary Area will become unstable. Other words and bits in the Auxiliary Area will be cleared to their default values.

The built-in capacitor's backup time varies with the ambient temperature as shown in the following graph.

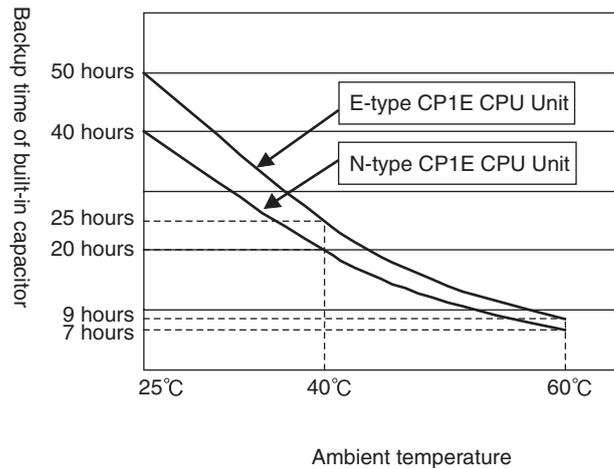

## I/O Memory Areas

Data can be read and written to I/O memory from the ladder programs. I/O memory consists of an area for I/O with external devices, user areas, and system areas.

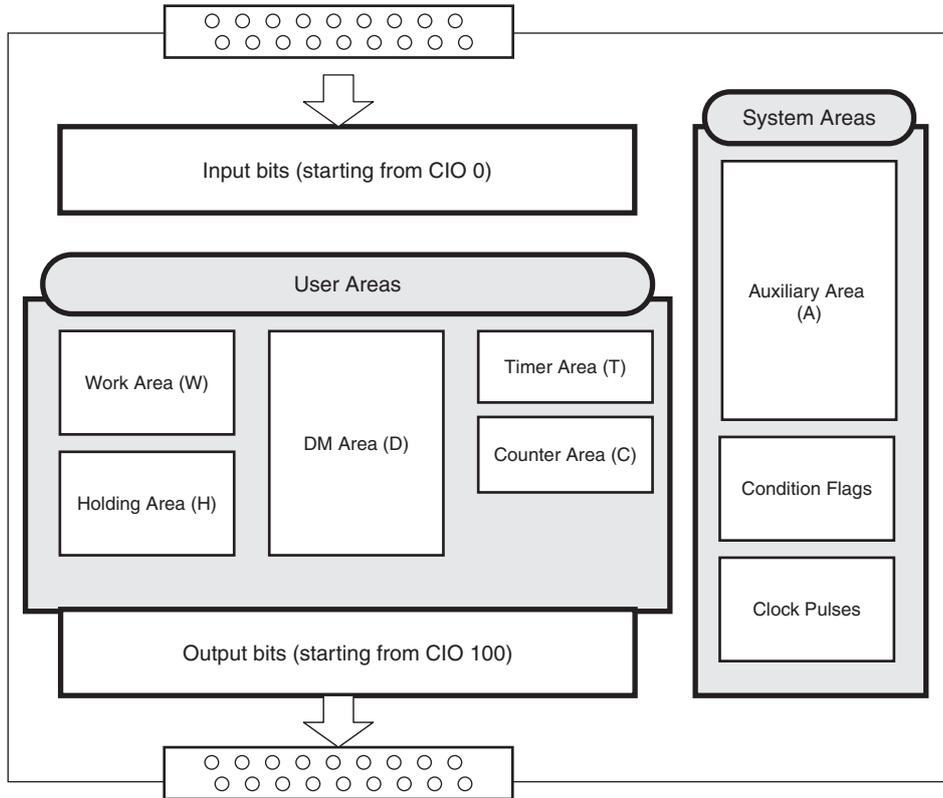


## I/O Memory Areas

| Name                 |                          | No. of bits            | Word addresses     | Remarks   |
|----------------------|--------------------------|------------------------|--------------------|---|
| CIO Area             | Input Bits               | 1,600 bits (100 words) | CIO 0 to CIO 99    | --  |
|                      | Output Bits              | 1,600 bits (100 words) | CIO 100 to CIO 199 | --  |
|                      | Serial PLC Link Words    | 1,440 bits (90 words)  | CIO 200 to CIO 289 | --  |
| Work Area (W)        |                          | 1,600 bits (100 words) | W0 to W99          | --  |
| Holding Area (H)     |                          | 800 bits (50 words)    | H0 to H49          | Data in this area is retained during power interruptions if a Battery Set (sold separately) is mounted to an N-type CPU Unit.   |
| Data Memory Area (D) | E-type CPU Unit          | 2 Kwords               | D0 to D2047        | Data in specified words of the DM Area can be retained in the built-in EEPROM in the backup memory by using a bit in the Auxiliary Area.<br>Applicable words: D0 to D1499 |
|                      | N-type CPU Unit          | 8 Kwords               | D0 to D8191        | Data in specified words of the DM Area can be retained in the built-in EEPROM in the backup memory by using a bit in the Auxiliary Area.<br>Applicable words: D0 to D6999 |
| Timer Area (T)       | Present values           | 256                    | T0 to T255         | --  |
|                      | Timer Completion Flags   | 256                    |                    | --  |
| Counter Area (C)     | Present values           | 256                    | C0 to C255         | Data in this area is retained during power interruptions if a Battery Set (sold separately) is mounted to an N-type CPU Unit.   |
|                      | Counter Completion Flags | 256                    |                    | --  |
| Auxiliary Area (A)   | Read only                | 7168 bits (448 words)  | A0 to A447         | Data in this area is retained during power interruptions if a Battery Set (sold separately) is mounted to an N-type CPU Unit.   |
|                      | Read-write               | 4,896 bits (306 words) | A448 to A753       |   |
| Temporary Area (TR)  |                          | 16 bits                | TR0 to TR15.       | --  |

## Backing Up and Restoring DM Area Data

The contents of the DM Area (D) will become unstable if the power supply is interrupted for longer than the backup time of the built-in capacitor for an N-type CPU Unit without a Battery or for an E-type CPU Unit.

The contents of the specified words in the DM Area data can be backed up from RAM to the built-in EEPROM backup memory during operation by turning ON a bit in the Auxiliary Area. The number of DM Area words to back up is specified in the Number of CH of DM for backup Box in the PLC Setup. If the Restore D0- from backup memory Check Box is selected in the PLC Setup, the backup data will automatically be restored to RAM when the power is turned back ON so that data is not lost even if power is interrupted.

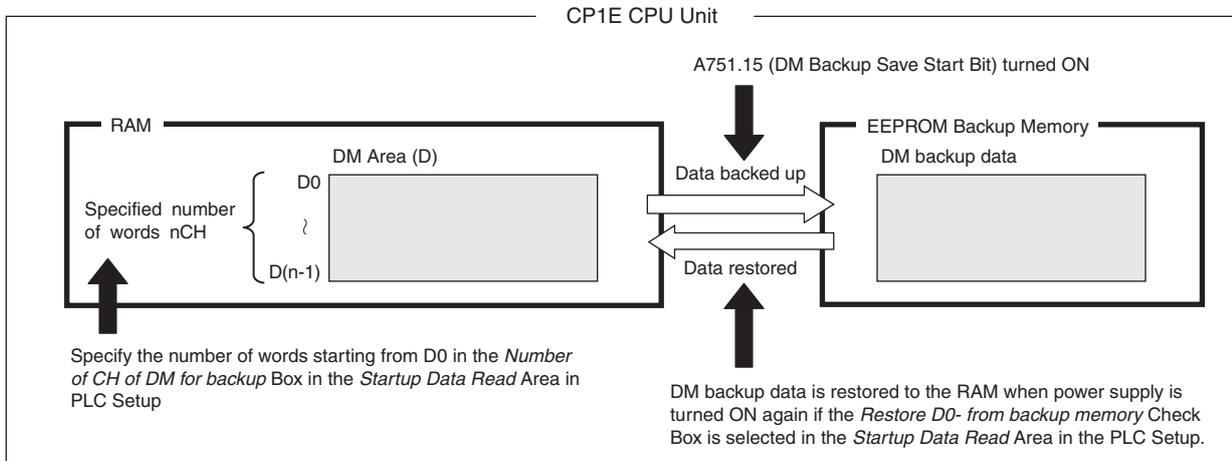

### Conditions for Executing Backup

Specified words starting from D0 in the RAM can be saved to the built-in EEPROM backup memory by turning ON A751.15.

(These words are called the DM backup words and the data is called the DM backup data.)

A751.15 (DM Backup Save Start Bit) can be used in any operating mode (RUN, MONITOR, or PROGRAM mode).

### Words That Can Be Backed Up


- E-type CP1E CPU Units: D0 to D1499
- N-type CP1E CPU Units: D0 to D6999

### Number of Words To Back Up

The number of words to back up starting from D0 is set in the Number of CH of DM for backup Box in the Startup Data Read Area in the PLC Setup.

### Restoring DM Backup Data to RAM When Power Is Turned ON

The DM backup data can be restored to RAM when power is turned ON by selecting the Restore D0- from backup memory Check Box in the Startup Data Read Area in the PLC Setup.

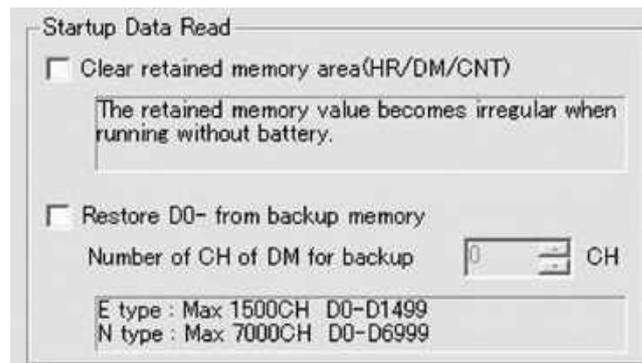



## Allocating Built-in Inputs to Functions

Input terminals are allocated functions by setting parameters in the PLC Setup. Set the PLC Setup so that each terminal is used for only one function.

| CPU Unit                    |                             |                             |                      |                 | Input terminal block |                 | Settings in PLC Setup                              |  |   |                                      |  |  |     |    |    |     |    |    |    |    |
|-----------------------------|-----------------------------|-----------------------------|----------------------|-----------------|----------------------|-----------------|--|--|---|--------------------------------------|--|--|-----|----|----|-----|----|----|----|----|
| CPU Unit with 20 I/O points | CPU Unit with 30 I/O points | CPU Unit with 40 I/O points | Terminal block label | Terminal number |                      |                 | Interrupt input setting on Built-in Input Tab Page | High-speed counter 0 to 3 setting on Built-in Input Tab Page | Origin search settings on Pulse Output 0/1 Tab Page | Normal                               | Interrupt                                    | Quick                                  | Use |    |    | Use |    |    |    |    |
|                             |                             |                             |                      |                 |                      |                 | Normal input                                       | Input interrupt  | Quick-response input                                | Single-phase (increment pulse input) | Two-phase (differential phase x4 or up/down) | Two-phase (pulse/direction)            | Use |    |    |     |    |    |    |    |
| Applicable                  | Applicable                  | Applicable                  | 0CH                  | 00              | ▶                    | Normal input 0  | --   | --   | Counter 0, increment input                          | Counter 0, phase A or up input       | Counter 0, pulse input                       | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 01              | ▶                    | Normal input 1  | --   | --   | Counter 1, increment input                          | Counter 0, phase B or down input     | Counter 1, pulse input                       | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 02              | ▶                    | Normal input 2  | Interrupt input 2                                  | Quick-response input 2                                       | Counter 2, increment input                          | Counter 1, phase A or up input       | Counter 0, direction                         | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 03              | ▶                    | Normal input 3  | Interrupt input 3                                  | Quick-response input 3                                       | --  | Counter 1, phase B or down input     | Counter 1, direction                         | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 04              | ▶                    | Normal input 4  | Interrupt input 4                                  | Quick-response input 4                                       | Counter 3, increment input                          | Counter 0, phase Z or reset input    | Counter 0, reset input                       | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 05              | ▶                    | Normal input 5  | Interrupt input 5                                  | Quick-response input 5                                       | Counter 4, increment input                          | Counter 1, phase Z or reset input    | Counter 1, reset input                       | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 06              | ▶                    | Normal input 6  | Interrupt input 6                                  | Quick-response input 6                                       | Counter 5, increment input                          | --                                   | --   | Pulse 0: Origin input signal           |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 07              | ▶                    | Normal input 7  | Interrupt input 7                                  | Quick-response input 7                                       | --  | --                                   | --   | Pulse 1: Origin input signal           |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 08              | ▶                    | Normal input 8  | --   | --   | --  | --                                   | --   | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 09              | ▶                    | Normal input 9  | --   | --   | --  | --                                   | --   | --                                     |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 10              | ▶                    | Normal input 10 | --   | --   | --  | --                                   | --   | Pulse 0: Origin proximity input signal |     |    |    |     |    |    |    |    |
|                             |                             |                             |                      | 11              | ▶                    | Normal input 11 | --   | --   | --  | --                                   | --   | Pulse 1: Origin proximity input signal |     |    |    |     |    |    |    |    |
| Not applicable              | Not applicable              | Not applicable              | 1CH                  | 00              |                      | Normal input 12 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- |    |    |    |
|                             |                             |                             |                      | 01              |                      | Normal input 13 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- |    |
|                             |                             |                             |                      | 02              |                      | Normal input 14 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- |    |
|                             |                             |                             |                      | 03              |                      | Normal input 15 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- |    |
|                             |                             |                             |                      | 04              |                      | Normal input 16 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- |    |
|                             |                             |                             |                      | 05              |                      | Normal input 17 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- | -- |
|                             |                             |                             |                      | 06              |                      | Normal input 18 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- | -- |
|                             |                             |                             |                      | 07              |                      | Normal input 19 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- | -- |
|                             |                             |                             |                      | 08              |                      | Normal input 20 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- | -- |
|                             |                             |                             |                      | 09              |                      | Normal input 21 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- | -- |
|                             |                             |                             |                      | 10              |                      | Normal input 22 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- | -- |
|                             |                             |                             |                      | 11              |                      | Normal input 23 | --   | --   | --  | --                                   | --   | --                                     | --  | -- | -- | --  | -- | -- | -- | -- |


## Built-in Outputs

### Terminal Arrangements

#### ●Output Terminal Arrangement for CPU Unit with 20 I/O Points


AC power supply model

DC power supply model

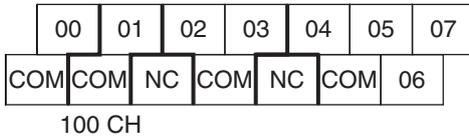


#### ●Output Terminal Arrangement for CPU Unit with 30 I/O Points

AC power supply model

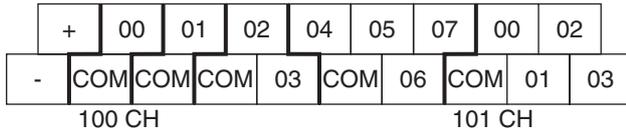


DC power supply model

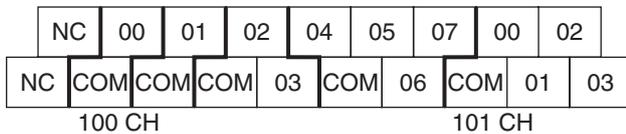


#### ●Output Terminal Arrangement for CPU Unit with 40 I/O Points

AC power supply model

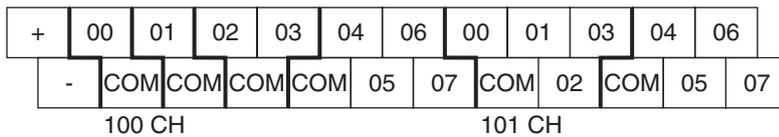

DC power supply model

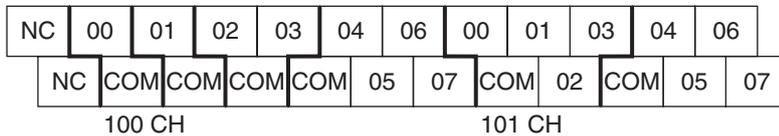

## Allocating Built-in Output Terminals to Functions

Output terminals are allocated functions by setting parameters in the PLC Setup. Set the PLC Setup so that each terminal is used for only one function.

| CPU Unit                    |                             |                             | Output terminal block |                 | Other than those shown right | When a pulse output instruction (SPED, ACC, PLS2, or ORG) is executed | Setting in PLC Setup                               | When the PWM instruction is executed |                               |                                  |
|-----------------------------|-----------------------------|-----------------------------|-----------------------|-----------------|------------------------------|---|--|--------------------------------------|-------------------------------|----------------------------------|
| CPU Unit with 20 I/O points | CPU Unit with 30 I/O points | CPU Unit with 40 I/O points | Terminal block label  | Terminal number |                              |   | Origin search setting on Pulse Output 0/1 Tab Page |                                      |                               |                                  |
| ↓                           | ↓                           | ↓                           |                       |                 |                              |   |  | Normal output                        | Fixed duty ratio pulse output | Variable duty ratio pulse output |
|                             |                             |                             |                       |                 |                              |   |  |                                      | Pulse + direction             | Use                              |


| Applicable     | Applicable      | Applicable                 | 100CH                               | 00               | Normal output 0 | Pulse output 0 (pulse) | -- | --           |
|----------------|-----------------|----------------------------|-------------------------------------|------------------|-----------------|------------------------|----|--------------|
|                |                 |                            |                                     | 01               | Normal output 1 | Pulse output 1 (pulse) | -- | PWM output 0 |
| 02             | Normal output 2 | Pulse output 0 (direction) | --                                  | --               |                 |                        |    |              |
| 03             | Normal output 3 | Pulse output 1 (direction) | --                                  | --               |                 |                        |    |              |
| 04             | Normal output 4 | --                         | Pulse 0: Error counter reset output | --               |                 |                        |    |              |
| 05             | Normal output 5 | --                         | Pulse 1: Error counter reset output | --               |                 |                        |    |              |
| 06             | Normal output 6 | --                         | --                                  | --               |                 |                        |    |              |
| 07             | Normal output 7 | --                         | --                                  | --               |                 |                        |    |              |
| Not applicable | Not applicable  | Applicable                 | 101CH                               | 00               | Normal output 8 | --                     | -- | --           |
|                |                 |                            | 01                                  | Normal output 9  | --              | --                     | -- |              |
|                |                 |                            | 02                                  | Normal output 10 | --              | --                     | -- |              |
|                |                 |                            | 03                                  | Normal output 11 | --              | --                     | -- |              |
|                |                 |                            | 04                                  | Normal output 12 | --              | --                     | -- |              |
|                |                 |                            | 05                                  | Normal output 13 | --              | --                     | -- |              |
|                |                 |                            | 06                                  | Normal output 14 | --              | --                     | -- |              |
|                |                 |                            | 07                                  | Normal output 15 | --              | --                     | -- |              |

These functions are supported only by N-type CPU Units with transistor outputs.

# I/O Specifications for CPU Units

## Input Specifications

| Item                 | Specification   |   |  |
|----------------------|---|---|--|
| Input type           | High-speed counter inputs or Normal Inputs                  | High-speed counter inputs, interrupt input, quick-response inputs, or Normal Inputs | Normal inputs                                    |
| Input bits           | CIO 0.00 to CIO 0.01  | CIO 0.02 to CIO 0.07 *1   | CIO 0.08 to CIO 0.11 and CIO 1.00 to CIO 1.11 *1 |
| Input voltage        | 24 VDC, +10%, -15%  |   |  |
| Applicable sensors   | 2-wire and 3-wire sensors                                   |   |  |
| Input impedance      | 3.3 kΩ  | 3.3 kΩ  | 4.8 kΩ   |
| Input current        | 7.5 mA typical  | 7.5 mA typical  | 5 mA typical                                     |
| ON voltage/current   | 17.0 VDC/3 mA min.  | 17.0 VDC/3 mA min.  | 14.4 VDC/3 mA min.                               |
| OFF voltage/current  | 1 mA max. at 5.0 VDC max.                                   | 1 mA max. at 5.0 VDC max.   | 1 mA max. at 5.0 VDC max.                        |
| ON response time *2  | E-type CPU Unit: 50 μs min.<br>N-type CPU Unit: 2.5 μs min. | 50 μs max.  | 1 ms max.  |
| OFF response time *2 | E-type CPU Unit: 50 μs min.<br>N-type CPU Unit: 2.5 μs min. | 50 μs max.  | 1 ms max.  |




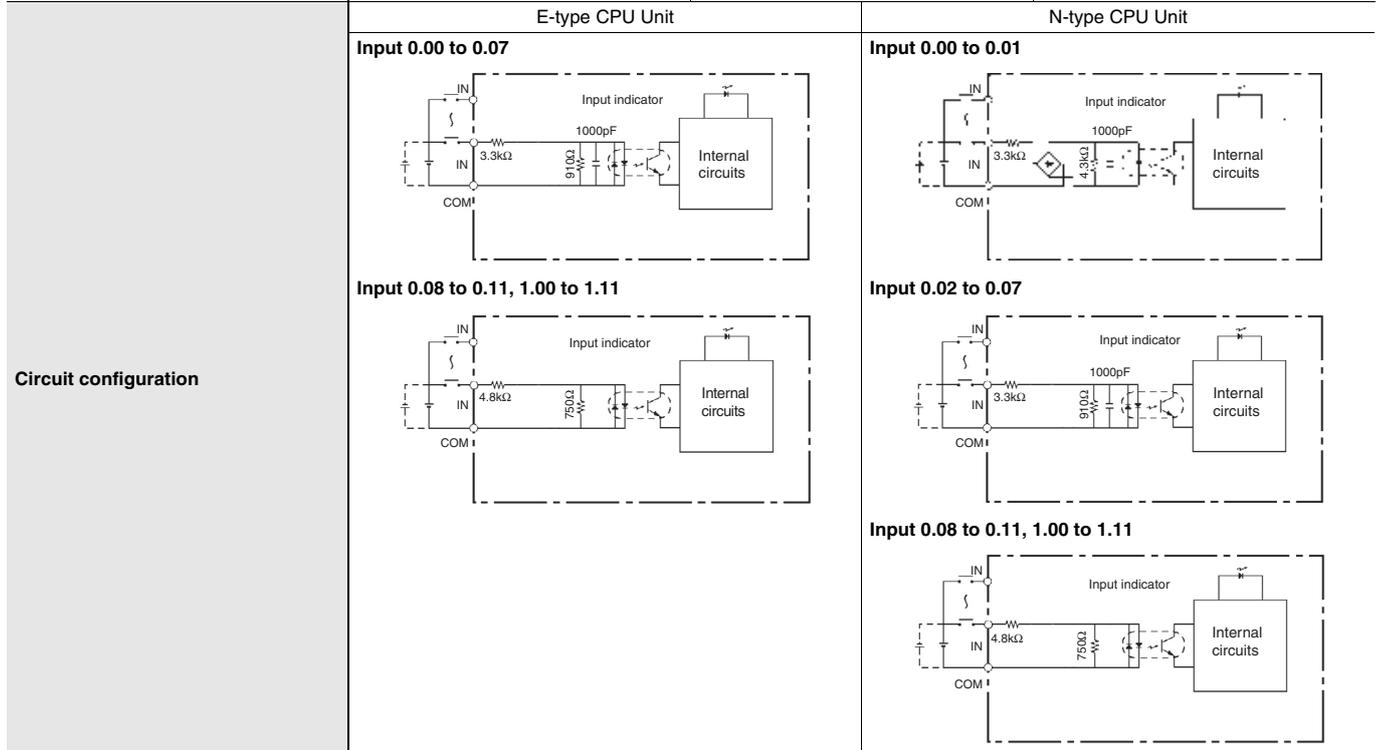


\* 1 The bits that can be used depend on the model of CPU Unit.

\* 2 The response time is the delay caused by hardware. The delay set in the PLC Setup (0 to 32 ms, default: 8 ms) for a normal input must be added to this value.

Pulse plus direction input mode,  
Increment mode  
Up/down input mode

Differential phase mode

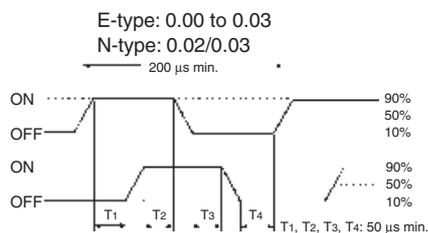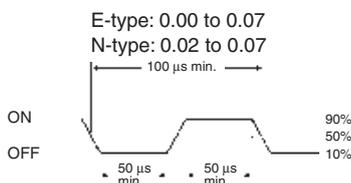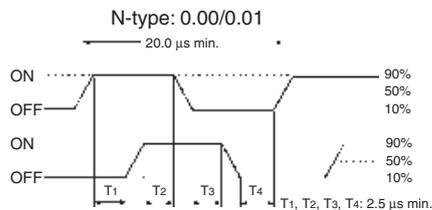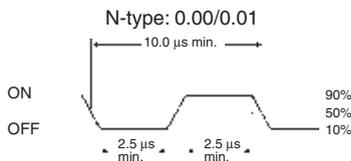


## Output Specifications

### ●Output Specifications for Relay Outputs

| Item                       |            | Specification   |
|----------------------------|------------|---|
| Maximum switching capacity |            | 250 VAC/2 A (cosφ = 1)<br>2 A, 24 VDC (4 A/common)        |
| Minimum switching capacity |            | 5 VDC, 10 mA  |
| Service life of relay      | Electrical | Resistive load<br>200,000 operations (24 VDC)             |
|                            |            | Inductive load<br>70,000 operations (250 VAC, cosφ = 0.4) |
|                            | Mechanical | 20,000,000 operations                                     |
| ON delay                   |            | 15 ms max.  |
| OFF response time          |            | 15 ms max.  |
| Circuit configuration      |            |   |


### Estimating the Service Life of Relays

Under normal conditions, the service life of output contacts is as shown above. The service life of relays is as shown in the following diagram as a guideline

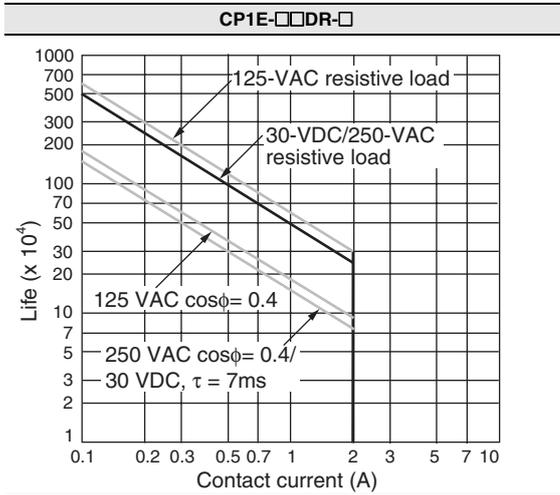

### Relationship between Continuous Simultaneous ON Rate and Ambient Temperature





There are restrictions on the power supply voltage and output load current imposed by the ambient temperature. Make sure that the power supply voltage and output load current are within the following ranges.

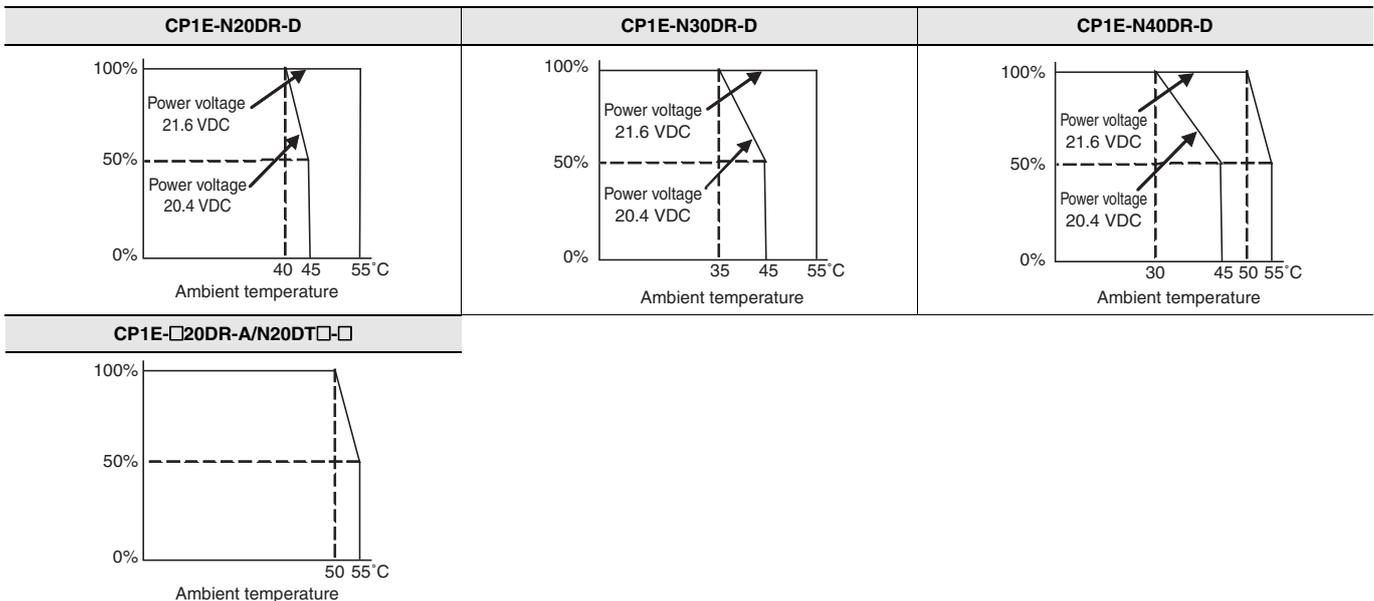

**Note:** The above restrictions apply to the relay output load current from the CPU Unit even if Expansion I/O Units are not connected.

●Output Specifications for Transistor Outputs (Sinking or Sourcing)

Normal Outputs

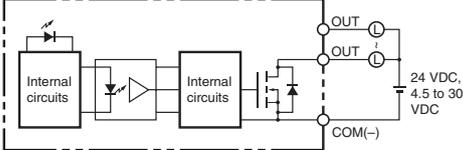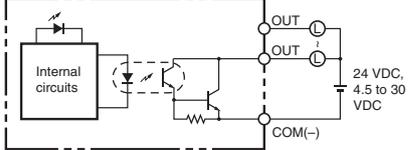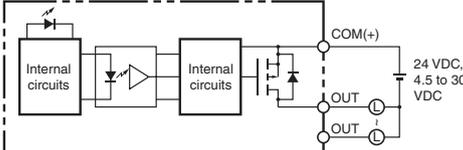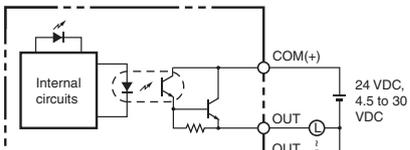
| Item                       | Specification   |  |
|----------------------------|---|--|
|                            | CIO 100.00 and CIO 100.01   | CIO 100.02 to CIO 100.07 and CIO 101.00 to CIO 101.07 *2 |
| Maximum switching capacity | 4.5 to 30 VDC, 0.3 A/output, 0.9 A/common *1<br>CP1E-N40D□-□: 3.6 A per Unit<br>CP1E-N30D□-□: 2.7 A per Unit<br>CP1E-N20D□-□: 1.8 A per Unit  |  |
| Minimum switching capacity | 4.5 to 30 VDC, 1 mA   |  |
| Leakage current            | 0.1mA max.  |  |
| Residual voltage           | 0.6 V max.  | 1.5V max.  |
| ON response time           | 0.1 ms max.   | 0.1 ms max.  |
| OFF response time          | 0.1 ms max.   | 1 ms max.  |
| Fuse                       | Not provided.   |  |
| Circuit configuration      | <b>Normal outputs: CIO 100.00 to CIO 100.01</b><br><b>(sinking outputs)</b><br>                              |  |
|                            | <b>Normal outputs: CIO 100.02 to CIO 100.07</b><br><b>CIO 101.00 to CIO 101.07</b><br><b>(sinking)</b><br> |  |
|                            | <b>Normal outputs: CIO 100.00 to CIO 100.01</b><br><b>(sourcing outputs)</b><br>                            |  |
|                            | <b>Normal outputs: CIO 100.02 to CIO 100.07,</b><br><b>CIO 101.00 to CIO 101.07 (sourcing).</b><br>       |  |

**Note:** Do not connect a load to an output terminal or apply a voltage in excess of the maximum switching capacity.

\* 1 Also do not exceed 0.9 A for the total for CIO 100.00 to CIO 100.03.

\* 2 The bits that can be used depend on the model of CPU Unit.


Pulse Outputs (CIO 100.00 and CIO 100.01)
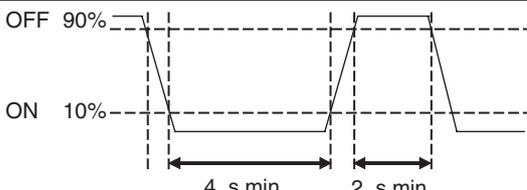
| Item                       | Specification  |
|----------------------------|--|
| Maximum switching capacity | 100 mA/4.5 to 26.4 VDC   |
| Minimum switching capacity | 7 mA/4.5 to 26.4 VDC   |
| Maximum output frequency   | 100 kHz  |
| Output waveform            |  |

**Note:** 1. The load for the above values is assumed to be the resistance load, and does not take into account the impedance for the connecting cable to the load.

2. Due to distortions in pulse waveforms resulting from connecting cable impedance, the pulse widths in actual operation may be smaller than the values shown above.

PWM Output (CIO 100.01)
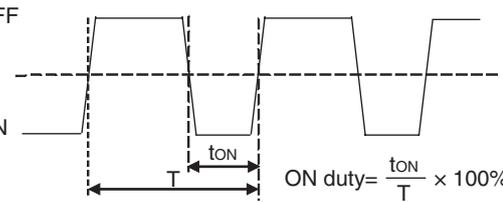
| Item                       | Specification   |
|----------------------------|---|
| Maximum switching capacity | 30 mA/4.5 to 26.4 VDC   |
| Maximum output frequency   | 32 kHz  |
| PWM output accuracy        | For ON duty +1%, .0%: 10 kHz output<br>For ON duty +5%, .0%: 0 to 32 kHz output     |
| Output waveform            |  |


# CP1E-E□D□-A/CP1E-N□D□-□

## Specifications of Expansion I/O Units and Expansion Units


### Expandable CPU Units

- Expansion I/O Units and Expansion Units cannot be connected to an E-type or N-type CPU Units with 20 I/O points.
- A total of up to three Expansion I/O Units and Expansion Units can be connected to an E-type or N-type CPU Unit with 30 or 40 I/O points.

#### ●CP1E CPU Unit with 20 I/O Points

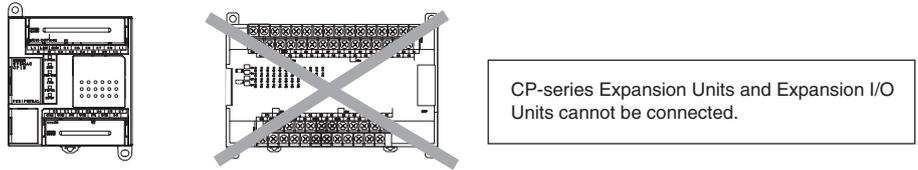

#### ●CP1E CPU Unit with 30 or 40 I/O Points

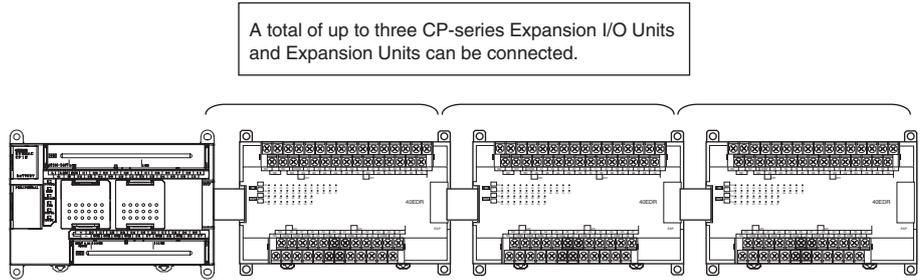

### Connection Methods

Connection cables for the Expansion I/O Units and Expansion Units are used to connect the Units. The length can be extended by using a CP1W-CN811 I/O Connection Cable (length: 800 m).

### Maximum Number of I/O Points for an Expanded System

| CPU Unit     | Built-in I/O on CPU Unit |                  |                   | Total number of Expansion I/O Units and Expansion Units that can be connected | Number of inputs: 24<br>Number of outputs: 16<br>Total number of I/O points when three CP1W-40ED□ Expansion I/O Units are connected |                  |                   |
|--------------|--------------------------|------------------|-------------------|---|---|------------------|-------------------|
|              | Total                    | Number of inputs | Number of outputs |   | Total   | Number of inputs | Number of outputs |
| CP1E-□20D□-□ | 20                       | 12               | 8                 | Not possible.   | 20  | 12               | 8                 |
| CP1E-□30D□-□ | 30                       | 18               | 12                | 3 Units maximum   | 150   | 90               | 60                |
| CP1E-□40D□-□ | 40                       | 24               | 16                |   | 160   | 96               | 64                |

### Restrictions on External Power Supply Capacity

The following restrictions apply when using the CPU Unit's external power supply.

#### ●CPU Unit with 30 or 40 I/O Points

It may not be possible to use the full 300 mA of the external power supply when connecting a CP-series Expansion I/O Unit or CP-series Expansion Unit because the power supply capacity is restricted for CPU Units with 30 or 40 I/O points.

The entire 300 mA from the external power supply can be used if Expansion Units and Expansion I/O Units are not connected.

Refer to the CP1E CPU Unit Hardware Manual (Cat. No. W479) for details.


#### ●CPU Unit with 20 I/O Points

There is no external power supply on CPU Units with 20 I/O points.

## Specifications of Expansion I/O Units

### ●Input Specifications (CP1W-40EDR/40EDT/40EDT1/20EDR1/20EDT/20EDT1/8ED)

| Item            | Specification    |
|-----------------|------------------|
| Input voltage   | 24 VDC +10%/-15% |
| Input impedance | 4.7 kΩ           |
| Input current   | 5 mA typical     |
| ON voltage      | 14.4 VDC min.    |
| OFF voltage     | 5.0 VDC max.     |
| ON delay        | 1 ms max. *      |
| OFF delay       | 1 ms max. *      |

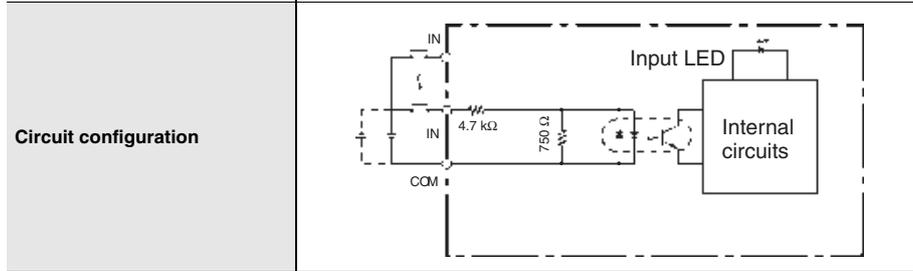


**Note:** Do not apply voltage in excess of the rated voltage to the input terminal.


\* The response time is the hardware delay value. The delay set in the PLC Setup (0 to 32 ms, default: 8 ms) must be added to this value. For the CP1W-40EDR/EDT/EDT1, a fixed value of 16 ms must be added.

### ●Output Specifications Relay Outputs (CP1W-40EDR/32ER/20EDR1/16ER/8ER)


| Item                                 | Specification  |  |
|--------------------------------------|--|--|
| Max. switching capacity              | 2 A, 250 VAC (cosφ = 1),<br>2 A, 24 VDC (4 A/common) |  |
| Min. switching capacity              | 5 VDC, 10 mA   |  |
| Service life of relay<br>(See note.) | Electrical<br>Resistive load                         | 150,000 operations (24 VDC)              |
|                                      | Inductive load                                       | 100,000 operations (240 VAC, cosφ = 0.4) |
|                                      | Mechanical   | 20,000,000 operations                    |
| ON delay                             | 15 ms max.   |  |
| OFF delay                            | 15 ms max.   |  |

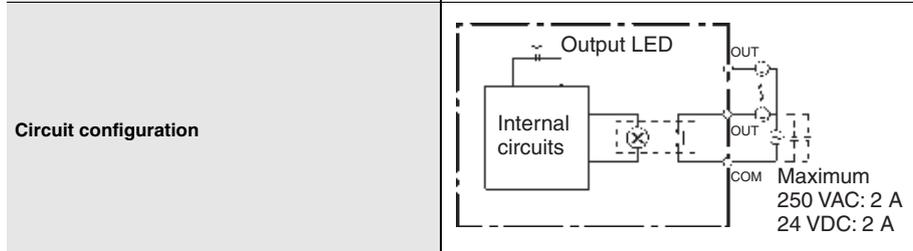


**Note: 1.** Under the worst conditions, the service life of output contacts is as shown above. The service life of relays is as shown in the following diagram as a guideline.

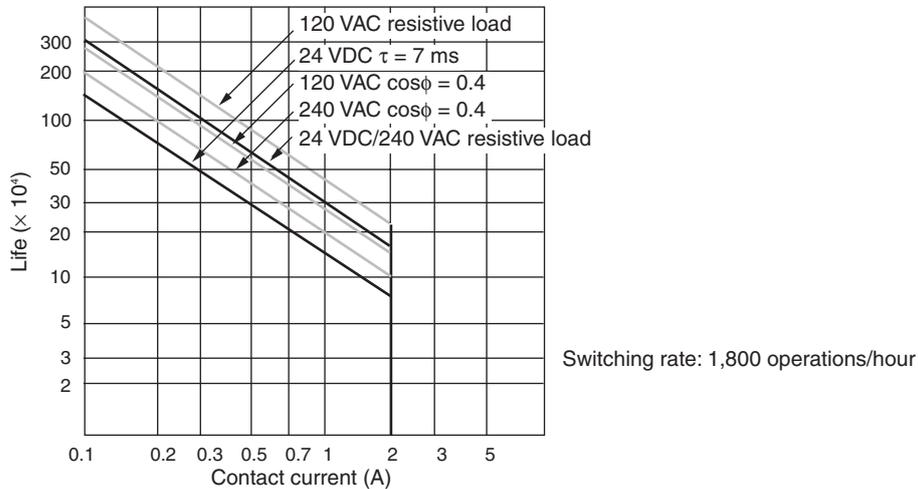


2. With the CP1W-32ER/CP1W-16ER, the load current is restricted depending on the ambient temperature. Design the system considering the load current based on the following graph.

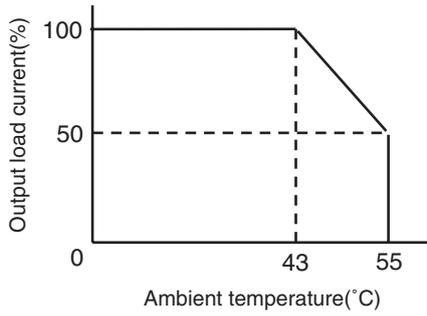

3. CP1W-32ER's maximum number of simultaneously ON output points is 24 (75%). Design the system considering the simultaneously ON points and load current based on the following curve.

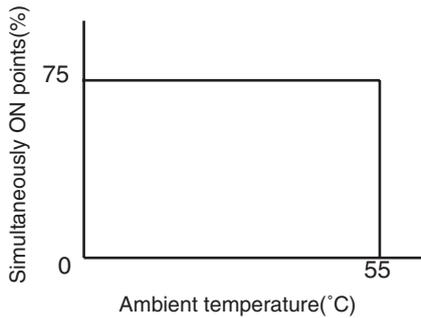


4. CPU Units with DC power supply (CP1E-N□□□-D) are restrictions imposed by the ambient temperature. Relay Output Load Current Derating Curves for Expansion I/O Units (CP1W-8ER/16ER/20EDR1/32ER/40EDR)

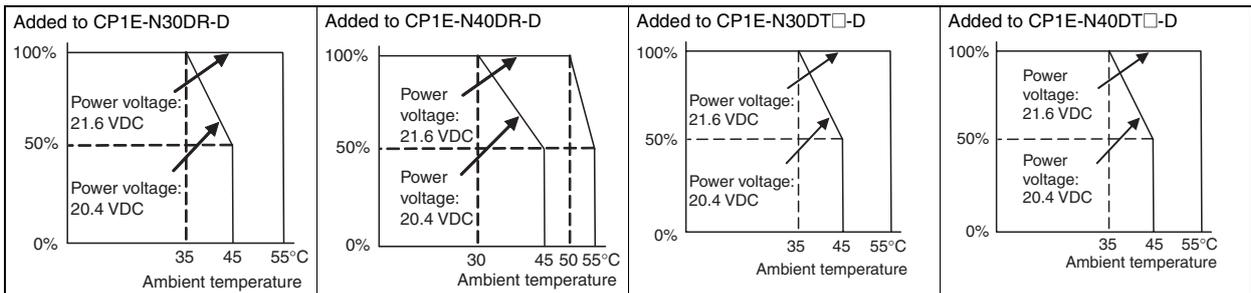


● Transistor Outputs (Sinking or Sourcing)

| Item  | Specification                               |   |   |   |   |
|---|---|---|---|---|---|
|   | CP1W-40EDT<br>CP1W-40EDT1                   | CP1W-32ET<br>CP1W-32ET1                     | CP1W-20EDT<br>CP1W-20EDT1                   | CP1W-16ET<br>CP1W-16ET1                     | CP1W-8ET<br>CP1W-8ET1   |
| Max. switching capacity<br>(See note 2.)          | 4.5 to 30 VDC<br>0.3 A/output               | 4.5 to 30 VDC<br>0.3 A/output               | 24 VDC +10%/-5%<br>0.3 A/output             | 4.5 to 30 VDC<br>0.3 A/output               | ● OUT00/01 4.5 to 30 VDC, 0.2 A/output<br>● OUT02 to 07 4.5 to 30 VDC, 0.3 A/output |
|   | 0.9 A/common<br>3.6 A/Unit                  | 0.9 A/common<br>7.2 A/Unit                  | 0.9 A/common<br>1.8 A/Unit                  | 0.9 A/common<br>3.6 A/Unit                  | 0.9 A/common<br>1.8 A/Unit  |
| Leakage current                                   | 0.1 mA max.   |
| Residual voltage                                  | 1.5 V max.  |
| ON delay  | 0.1 ms max.                                 | 0.1 ms max.                                 | 0.1 ms.                                     | 0.1 ms max.                                 | 0.1 ms max.   |
| OFF delay   | 1 ms max.<br>24 VDC +10%/-5%<br>5 to 300 mA | 1 ms max.<br>24 VDC +10%/-5%<br>5 to 300 mA | 1 ms max.<br>24 VDC +10%/-5%<br>5 to 300 mA | 1 ms max.<br>24 VDC +10%/-5%<br>5 to 300 mA | 1 ms max.<br>24 VDC +10%/-5%<br>5 to 300 mA   |
| Max. number of Simultaneously ON Points of Output | 16 pts (100%)                               | 24 pts (75%)                                | 8 pts (100%)                                | 16 pts (100%)                               | 8 pts (100%)  |
| Fuse (See note 1.)                                | 1 fuse/common                               |   |   |   |   |

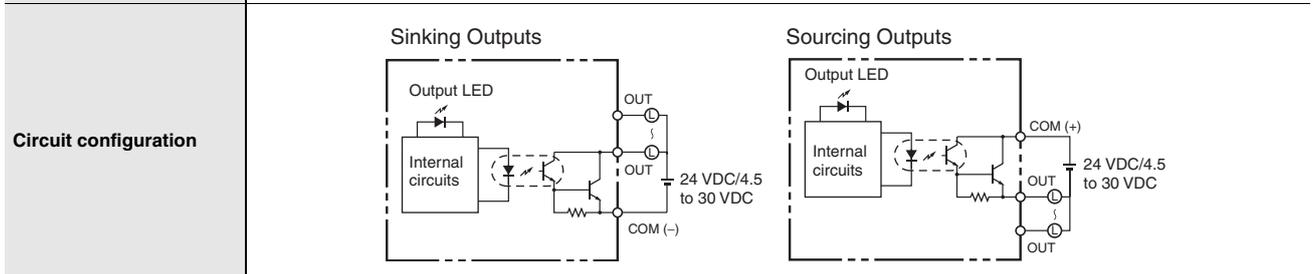

- Note:** 1. The fuse cannot be replaced by the user.  
 2. If the ambient temperature is maintained below 50°C, up to 0.9 A/common can be used.

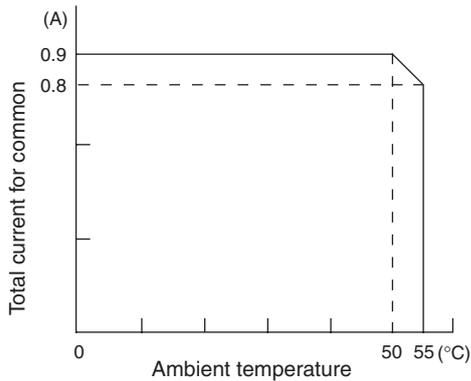

3. Do not connect a load to an output terminal or apply a voltage in excess of the maximum switching capacity.

## Specifications of Expansion Units

### ●Analog Input Units

| Model                           |           | CP1W-AD041   |                          |
|---------------------------------|-----------|--|--------------------------|
| Item                            |           | Voltage Input  | Current Input            |
| Number of inputs                |           | 4 inputs (4 words allocated)   |                          |
| Input signal range              |           | 0 to 5 VDC, 1 to 5 VDC,<br>0 to 10 VDC, or -10 to 10 VDC   | 0 to 20 mA or 4 to 20 mA |
| Max. rated input                |           | ±15 V  | ±30 mA                   |
| External input impedance        |           | 1 MΩ min.  | Approx. 250 Ω            |
| Resolution                      |           | 1/6000 (full scale)  |                          |
| Overall accuracy                | 25°C      | 0.3% full scale  | 0.4% full scale          |
|                                 | 0 to 55°C | 0.6% full scale  | 0.8% full scale          |
| A/D conversion data             |           | 16-bit binary (4-digit hexadecimal)<br>Full scale for -10 to 10 V: F448 to 0BB8 Hex<br>Full scale for other ranges: 0000 to 1770 Hex |                          |
| Averaging function              |           | Supported (Set in output words n+1 and n+2.)   |                          |
| Open-circuit detection function |           | Supported  |                          |
| Conversion time                 |           | 2 ms/point (8 ms/all points)   |                          |
| Isolation method                |           | Photocoupler isolation between analog I/O terminals and internal circuits. No isolation between analog I/O signals.                  |                          |
| Current consumption             |           | 5 VDC: 100 mA max.; 24 VDC: 90 mA max.   |                          |

### ●Analog Output Units

| Model                 |  | CP1W-DA041  |                          |  |
|-----------------------|--|---|--------------------------|--|
| Item                  |  | Voltage Output  | Current Output           |  |
| Analog output section | Number of outputs  | 4 outputs (4 words allocated)   |                          |  |
|                       | Output signal range  | 1 to 5 VDC, 0 to 10 VDC, or -10 to 10 VDC   | 0 to 20 mA or 4 to 20 mA |  |
|                       | External output allowable load resistance  | 2 kΩ min.   | 350 Ω max.               |  |
|                       | External output impedance  | 0.5 Ω max.  | ---                      |  |
|                       | Resolution   | 1/6000 (full scale)   |                          |  |
|                       | Overall accuracy   | 25°C  | 0.4% full scale          |  |
|                       |  | 0 to 55°C   | 0.8% full scale          |  |
| D/A conversion data   | 16-bit binary (4-digit hexadecimal)<br>Full scale for -10 to 10 V: F448 to 0BB8 Hex<br>Full scale for other ranges: 0000 to 1770 Hex |   |                          |  |
| Conversion time       |  | 2 ms/point (8 ms/all points)  |                          |  |
| Isolation method      |  | Photocoupler isolation between analog I/O terminals and internal circuits. No isolation between analog I/O signals. |                          |  |
| Current consumption   |  | 5 VDC: 80 mA max.; 24 VDC: 124 mA max.  |                          |  |

●Analog I/O Units


| Model                     |  | CP1W-MAD11   |                          |                 |
|---------------------------|--|--|--------------------------|-----------------|
| Item                      |  | Voltage I/O  | Current I/O              |                 |
| Analog Input Section      | Number of inputs   | 2 inputs (2 words allocated)   |                          |                 |
|                           | Input signal range   | 0 to 5 VDC, 1 to 5 VDC, 0 to 10 VDC, or -10 to 10 VDC  | 0 to 20 mA or 4 to 20 mA |                 |
|                           | Max. rated input   | ±15 V  | ±30 mA                   |                 |
|                           | External input impedance   | 1 MΩ min.  | Approx. 250 Ω            |                 |
|                           | Resolution   | 1/6000 (full scale)  |                          |                 |
|                           | Overall accuracy   | 25°C   | 0.3% full scale          | 0.4% full scale |
|                           |  | 0 to 55°C  | 0.6% full scale          | 0.8% full scale |
|                           | A/D conversion data  | 16-bit binary (4-digit hexadecimal)<br>Full scale for -10 to 10 V: F448 to 0BB8 hex<br>Full scale for other ranges: 0000 to 1770 hex |                          |                 |
|                           | Averaging function   | Supported (Settable for individual inputs via DIP switch)  |                          |                 |
|                           | Open-circuit detection function  | Supported  |                          |                 |
| Analog Output Section     | Number of outputs  | 1 output (1 word allocated)  |                          |                 |
|                           | Output signal range  | 1 to 5 VDC, 0 to 10 VDC, or -10 to 10 VDC,   | 0 to 20 mA or 4 to 20 mA |                 |
|                           | Allowable external output load resistance  | 1 kΩ min.  | 600 Ω max.               |                 |
|                           | External output impedance  | 0.5 Ω max.   |                          |                 |
|                           | Resolution   | 1/6000 (full scale)  |                          |                 |
|                           | Overall accuracy   | 25°C   | 0.4% full scale          |                 |
|                           |  | 0 to 55°C  | 0.8% full scale          |                 |
| Set data (D/A conversion) | 16-bit binary (4-digit hexadecimal)<br>Full scale for -10 to 10 V: F448 to 0BB8 hex<br>Full scale for other ranges: 0000 to 1770 hex |  |                          |                 |
| Conversion time           | 2 ms/point (6 ms/all points)   |  |                          |                 |
| Isolation method          | Photocoupler isolation between analog I/O terminals and internal circuits.<br>No isolation between analog I/O signals.               |  |                          |                 |
| Current consumption       | 5 VDC: 83 mA max., 24 VDC: 110 mA max.   |  |                          |                 |

●Temperature Sensors Units

| Item                       | CP1W-TS001   | CP1W-TS002 | CP1W-TS101  | CP1W-TS102 |
|----------------------------|--|------------|---|------------|
| Temperature sensors        | Thermocouples  |            | Platinum resistance thermometer   |            |
|                            | Switchable between K and J, but same type must be used for all inputs. |            | Switchable between Pt100 and JPt100, but same type must be used for all inputs. |            |
| Number of inputs           | 2  | 4          | 2   | 4          |
| Allocated input words      | 2  | 4          | 2   | 4          |
| Accuracy                   | (The larger of ±0.5% of converted value or ±2°C) ±1 digit max. *       |            | (The larger of ±0.5% of converted value or ±1°C) ±1 digit max.                  |            |
| Conversion time            | 250 ms for 2 or 4 input points   |            |   |            |
| Converted temperature data | 16-bit binary data (4-digit hexadecimal)                               |            |   |            |
| Isolation                  | Photocouplers between all temperature input signals                    |            |   |            |
| Current consumption        | 5 VDC: 40 mA max., 24 VDC: 59 mA max.                                  |            | 5 VDC: 54 mA max., 24 VDC: 73 mA max.   |            |

\* Accuracy for a K-type sensor at -100°C or less is ±4°C ±1 digit max.

The rotary switch is used to set the temperature range.
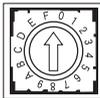
| Setting  | CP1W-TS001/TS002 |                |               | CP1W-TS101/TS102 |                 |                   |
|--|------------------|----------------|---------------|------------------|-----------------|-------------------|
|  | Input type       | Range (°C)     | Range (°F)    | Input type       | Range (°C)      | Range (°F)        |
| <br>0 | K                | -200 to 1,300  | -300 to 2,300 | Pt100            | -200.0 to 650.0 | -300.0 to 1,200.0 |
|  |                  | 1              | 0.0 to 500.0  | 0.0 to 900.0     | JPt100          | -200.0 to 650.0   |
| 2  | J                | -100 to 850    | -100 to 1,500 | ---              | Cannot be set.  |                   |
| 3  |                  | 0.0 to 400.0   | 0.0 to 750.0  | ---              |                 |                   |
| 4 to F   | ---              | Cannot be set. |               | ---              |                 |                   |

●CompoBus/S I/O Link Unit


| Model number                                     | CP1W-SRT21   |
|--|--|
| Master/slave                                     | CompoBus/S Slave   |
| Number of I/O points                             | 8 input points, 8 output points  |
| Number of words allocated in CPU Unit I/O memory | 1 input word, 1 output word  |
| Node number setting                              | Set using the DIP switch<br>(Set before turning on the CPU Unit's power supply.) |

# CP1E-E□D□-A/CP1E-N□D□-□


## External Interfaces

The CP1E CPU Units provide the following external interfaces.

### CP1E CPU Unit with 20 I/O Points

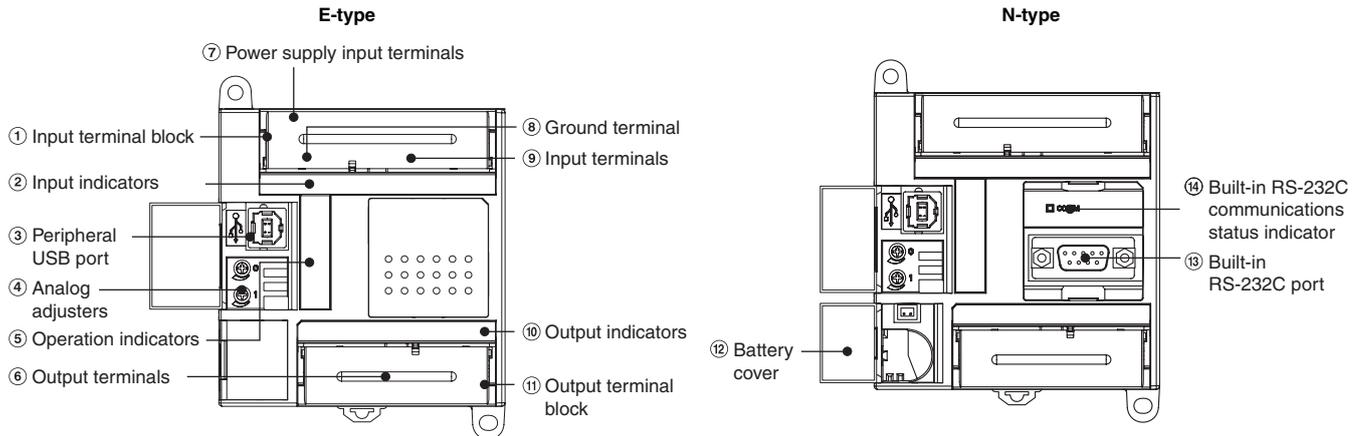


### CP1E CPU Unit with 30/40 I/O Points

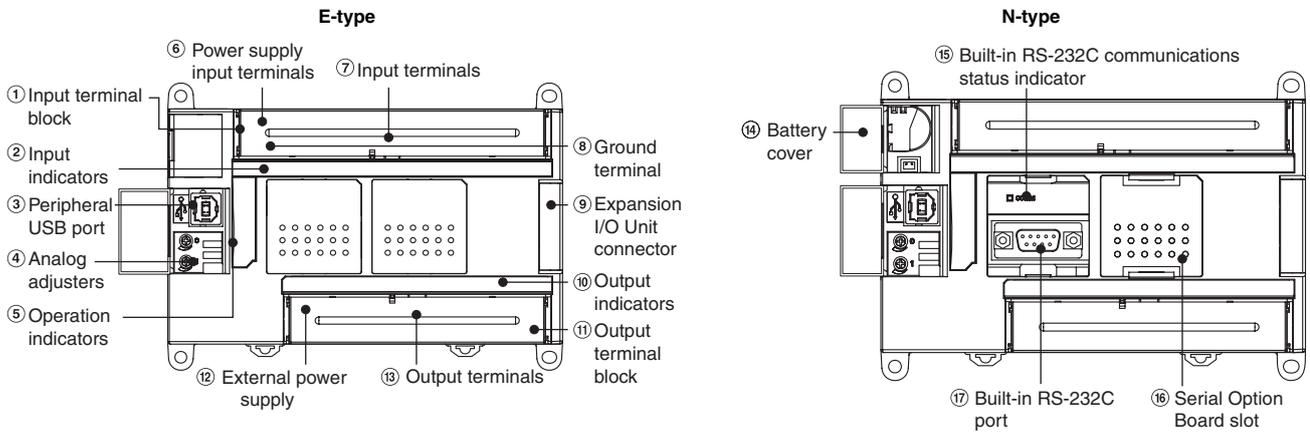

### Built-in RS-232C Port for N-type CPU Units


#### ●RS-232C Connector

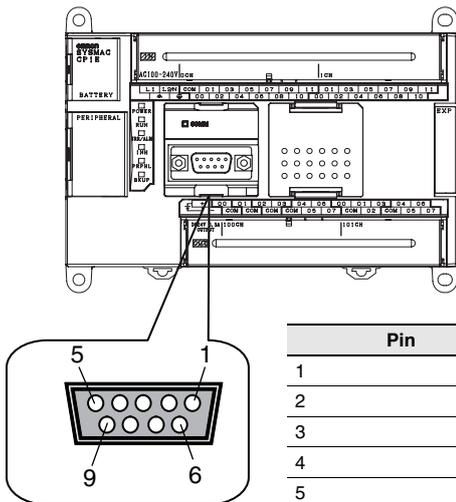

| Pin            | Abbr.    | Signal name         | Signal direction |
|----------------|----------|---------------------|------------------|
| 1              | FG       | Frame ground        | --               |
| 2              | SD (TXD) | Send data           | Output           |
| 3              | RD (RXD) | Receive data        | Input            |
| 4              | RS (RTS) | Request to send     | Output           |
| 5              | CS (CTS) | Clear to send       | Input            |
| 6              | 5 V      | Power supply        | --               |
| 7              | DR (DSR) | Data set ready      | Input            |
| 8              | ER (DTR) | Data terminal ready | Output           |
| 9              | SG (0 V) | Signal ground       | --               |
| Connector hood | FG       | Frame Ground        | --               |


## Optional Serial Communications Board for N-type CPU Units with 30 or 40 I/O Points

The Option Board can be mounted in the option board slot of a CP1E N-type CPU Unit with 30 or 40 I/O Points.

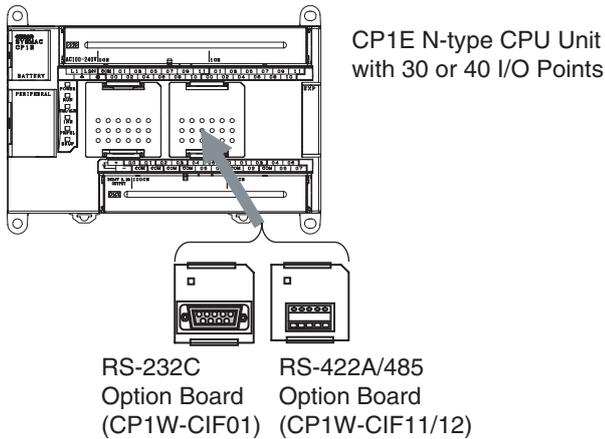


| Model number | Port                          | Maximum transmission distance | Connection method               |
|--------------|-------------------------------|-------------------------------|---------------------------------|
| CP1W-CIF01   | One RS-232C port              | 15 m                          | Connector (D-sub, 9 pin female) |
| CP1W-CIF11   | One RS-422A/485 port          | 50 m                          | Terminal block (using ferrules) |
| CP1W-CIF12   | One Isolated RS-422A/485 port | 500 m                         | Terminal block (using ferrules) |

### CP1W-CIF01 RS-232C Option Board

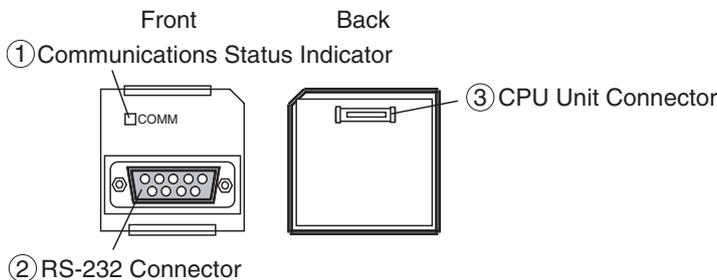


#### ●RS-232C Connector

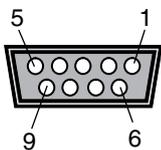


| Pin            | Abbr.    | Signal name         | Signal direction |
|----------------|----------|---------------------|------------------|
| 1              | FG       | Frame ground        | --               |
| 2              | SD (TXD) | Send data           | Output           |
| 3              | RD (RXD) | Receive data        | Input            |
| 4              | RS (RTS) | Request to send     | Output           |
| 5              | CS (CTS) | Clear to send       | Input            |
| 6              | 5 V      | Power supply        | --               |
| 7              | DR (DSR) | Data set ready      | Input            |
| 8              | ER (DTR) | Data terminal ready | Output           |
| 9              | SG (0 V) | Signal ground       | --               |
| Connector hood | FG       | Frame Ground        | --               |

### CP1W-CIF11/CIF12 RS-422A/485 Option Board

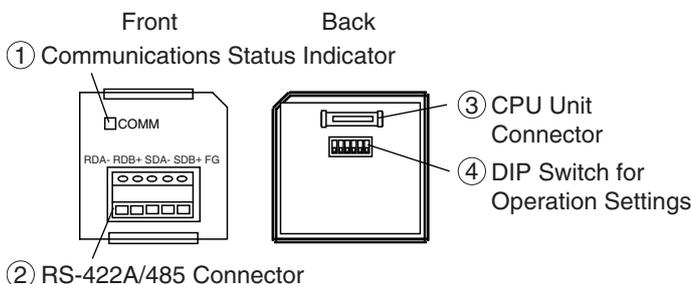

#### ●RS-422A/485 Terminal Block

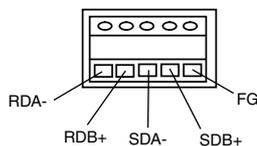

Tighten the terminal block screws to a torque of 0.28 N·m.

# CP1E-E□D□-A/CP1E-N□D□-□

## Connecting to Support Software


### Operating Environment and System Configuration

The following system is required to operate the CX-Programmer. Make sure your system provides the following conditions and has the necessary components.

| Item                        | Description   |
|-----------------------------|---|
| Supported computer          | IBM PC/AT or equivalent   |
| CD-ROM or DVD-ROM drive     | One or more   |
| Supported Operating Systems | Windows Vista, Windows XP, Windows 2000 (Service Pack 2 or later) |
| CPU                         | Pentium II 333 MHz or faster                                      |
| RAM                         | 256 MB min. 512 MB or more recommended                            |
| Available hard disk space   | 600 MB min.   |
| Display                     | 800 x 600 SVGA min.   |
| PLC and connection port     | USB port  |

### Connecting Methods

Using commercially available USB cable, connect the CX-Programmer to the peripheral USB port on the CPU Unit.

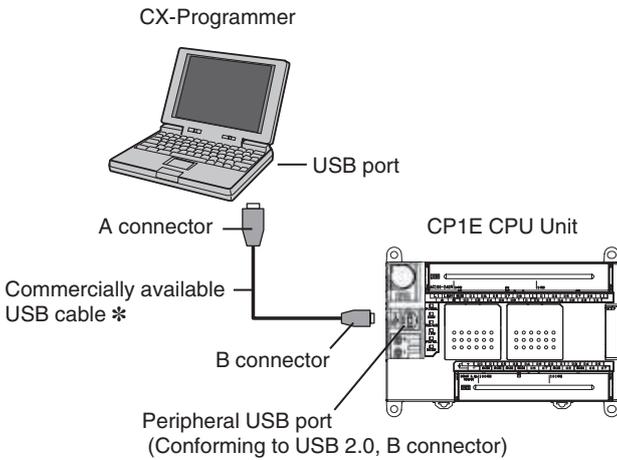

**Note:** The CX-Programmer cannot be used if it is connected to the built-in RS-232C port or serial option port of a CP1E CPU Unit.

\* Commercially available USB cable: 5 m max., for USB 2.0.

### Connecting Cable

Use the following cable to connect the CP1E CPU Unit to the computer running the Support Software.

| Port at Unit        | Port at computer | Network type (communications mode) | Model numbers  | Length        | Remarks |
|---------------------|------------------|------------------------------------|--|---------------|---------|
| Peripheral USB port | USB port         | USB 2.0 (or 1.1)                   | Commercially available USB cable (A connector - B connector) | Less than 5 m | --      |

## Unit Versions

| Units          | Model numbers              | Unit version     |
|----------------|----------------------------|------------------|
| CP1E CPU Units | CP1E-E□D□-A<br>CP1E-N□D□-□ | Unit version 1.□ |

## Unit Versions and Programming Devices

The following tables show the relationship between unit versions and CX-Programmer versions.

### Unit Versions and Programming Devices

| CPU Unit                   | Functions                      | Required Programming Device *                           |   |   |   |
|----------------------------|--------------------------------|---|---|---|---|
|                            |                                | CX-Programmer   | Micro PLC Edition CX-Programmer                         |   | CX-Programmer for CP1E                              |
|                            |                                | Ver. 8.2 or higher                                      | Ver. 8.2  | Ver. 9.0 or higher                                  | Ver. 1.0  |
| CP1E-E□D□-A<br>CP1E-N□D□-□ | Functions for unit version 1.□ | Applicable<br>The SmartInput function is not supported. | Applicable<br>The SmartInput function is not supported. | Applicable<br>The SmartInput function is supported. | Applicable<br>The SmartInput function is supported. |

\* A Programming Console cannot be used.

## Programming Instructions

### Sequence Input Instructions

| Instruction   | Mnemonic |
|---------------|----------|
| LOAD          | LD       |
| LOAD NOT      | LD NOT   |
| AND           | AND      |
| AND NOT       | AND NOT  |
| OR            | OR       |
| OR NOT        | OR NOT   |
| AND LOAD      | AND LD   |
| OR LOAD       | OR LD    |
| NOT           | NOT      |
| CONDITION ON  | UP       |
| CONDITION OFF | DOWN     |

### Sequence Output Instructions

| Instruction        | Mnemonic |
|--------------------|----------|
| OUTPUT             | OUT      |
| OUTPUT NOT         | OUT NOT  |
| KEEP               | KEEP     |
| DIFFERENTIATE UP   | DIFU     |
| DIFFERENTIATE DOWN | DIFD     |
| SET                | SET      |
| RESET              | RSET     |
| MULTIPLE BIT SET   | SETA     |
| MULTIPLE BIT RESET | RSTA     |
| SINGLE BIT SET     | SETB     |
| SINGLE BIT RESET   | RSTB     |

### Sequence Output Instructions

| Instruction                             | Mnemonic |
|---|----------|
| END                                     | END      |
| NO OPERATION                            | NOP      |
| INTERLOCK                               | IL       |
| INTERLOCK CLEAR                         | ILC      |
| MULTI-INTERLOCK DIFFERENTIATION HOLD    | MILH     |
| MULTI-INTERLOCK DIFFERENTIATION RELEASE | MILR     |
| MULTI-INTERLOCK CLEAR                   | MILC     |
| JUMP                                    | JMP      |
| JUMP END                                | JME      |
| CONDITIONAL JUMP                        | CJP      |
| FOR LOOP                                | FOR      |
| BREAK LOOP                              | BREAK    |
| NEXT LOOP                               | NEXT     |

### Timer and Counter Instructions

| Instruction         | Mnemonic |
|---------------------|----------|
| TIMER               | TIM      |
|                     | TIMX     |
| COUNTER             | CNT      |
|                     | CNTX     |
| HIGH-SPEED TIMER    | TIMH     |
|                     | TIMHX    |
| ONE-MS TIMER        | TMHH     |
|                     | TMHHX    |
| ACCUMULATIVE TIMER  | TTIM     |
|                     | TTIMX    |
| LONG TIMER          | TIML     |
|                     | TIMLX    |
| REVERSIBLE COUNTER  | CNTR     |
|                     | CNTRX    |
| RESET TIMER/COUNTER | CNR      |
|                     | CNRX     |

### Comparison Instructions

| Instruction                                      | Mnemonic        |
|--|-----------------|
| Input Comparison Instructions (unsigned)         | LD,AND,OR+=     |
|  | LD,AND,OR+<>    |
|  | LD,AND,OR+<     |
|  | LD,AND,OR+<=    |
|  | LD,AND,OR+>     |
| Input Comparison Instructions (double, unsigned) | LD,AND,OR+=+L   |
|  | LD,AND,OR+<>+L  |
|  | LD,AND,OR+<+L   |
|  | LD,AND,OR+<=+L  |
|  | LD,AND,OR+>+L   |
| Input Comparison Instructions (signed)           | LD,AND,OR+=+S   |
|  | LD,AND,OR+<>+S  |
|  | LD,AND,OR+<+S   |
|  | LD,AND,OR+<=+S  |
|  | LD,AND,OR+>+S   |
| Input Comparison Instructions (double, signed)   | LD,AND,OR+=+SL  |
|  | LD,AND,OR+<>+SL |
|  | LD,AND,OR+<+SL  |
|  | LD,AND,OR+<=+SL |
|  | LD,AND,OR+>+SL  |
| Time Comparison Instructions                     | =DT             |
|  | <>DT            |
|  | <DT             |
|  | <=DT            |
|  | >DT             |
| COMPARE  | >=DT            |
|  | CMP             |
|  | CMPL            |
|  | CPS             |
|  | CPSL            |
| TABLE COMPARE                                    | TCMP            |
| UNSIGNED BLOCK COMPARE                           | BCMP            |
| AREA RANGE COMPARE                               | ZCP             |
| DOUBLE AREA RANGE COMPARE                        | ZCPL            |

### Data Movement Instructions

| Instruction            | Mnemonic |
|------------------------|----------|
| MOVE                   | MOV      |
| DOUBLE MOVE            | MOVL     |
| MOVE NOT               | MVN      |
| MOVE BIT               | MOVB     |
| MOVE DIGIT             | MOVD     |
| MULTIPLE BIT TRANSFER  | XFRB     |
| BLOCK TRANSFER         | XFER     |
| BLOCK SET              | BSET     |
| DATA EXCHANGE          | XCHG     |
| SINGLE WORD DISTRIBUTE | DIST     |
| DATA COLLECT           | COLL     |

## Data Shift Instructions

| Instruction               | Mnemonic |
|---------------------------|----------|
| SHIFT REGISTER            | SFT      |
| REVERSIBLE SHIFT REGISTER | SFTR     |
| WORD SHIFT                | WSFT     |
| ARITHMETIC SHIFT LEFT     | ASL      |
| ARITHMETIC SHIFT RIGHT    | ASR      |
| ROTATE LEFT               | ROL      |
| ROTATE RIGHT              | ROR      |
| ONE DIGIT SHIFT LEFT      | SLD      |
| ONE DIGIT SHIFT RIGHT     | SRD      |
| SHIFT N-BITS LEFT         | NASL     |
| DOUBLE SHIFT N-BITS LEFT  | NSLL     |
| SHIFT N-BITS RIGHT        | NASR     |
| DOUBLE SHIFT N-BITS RIGHT | NSRL     |

## Increment/Decrement Instructions

| Instruction             | Mnemonic |
|-------------------------|----------|
| INCREMENT BINARY        | ++       |
| DOUBLE INCREMENT BINARY | ++L      |
| DECREMENT BINARY        | --       |
| DOUBLE DECREMENT BINARY | --L      |
| INCREMENT BCD           | ++B      |
| DOUBLE INCREMENT BCD    | ++BL     |
| DECREMENT BCD           | --B      |
| DOUBLE DECREMENT BCD    | --BL     |

## Symbol Math Instructions

| Instruction                                 | Mnemonic |
|---|----------|
| SIGNED BINARY ADD WITHOUT CARRY             | +        |
| DOUBLE SIGNED BINARY ADD WITHOUT CARRY      | +L       |
| SIGNED BINARY ADD WITH CARRY                | +C       |
| DOUBLE SIGNED BINARY ADD WITH CARRY         | +CL      |
| BCD ADD WITHOUT CARRY                       | +B       |
| DOUBLE BCD ADD WITHOUT CARRY                | +BL      |
| BCD ADD WITH CARRY                          | +BC      |
| DOUBLE BCD ADD WITH CARRY                   | +BCL     |
| SIGNED BINARY SUBTRACT WITHOUT CARRY        | -        |
| DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY | -L       |
| SIGNED BINARY SUBTRACT WITH CARRY           | -C       |
| DOUBLE SIGNED BINARY SUBTRACT WITH CARRY    | -CL      |
| BCD SUBTRACT WITHOUT CARRY                  | -B       |
| DOUBLE BCD SUBTRACT WITHOUT CARRY           | -BL      |
| BCD SUBTRACT WITH CARRY                     | -BC      |
| DOUBLE BCD SUBTRACT WITH CARRY              | -BCL     |
| SIGNED BINARY MULTIPLY                      | *        |
| DOUBLE SIGNED BINARY MULTIPLY               | *L       |
| BCD MULTIPLY                                | *B       |
| DOUBLE BCD MULTIPLY                         | *BL      |
| SIGNED BINARY DIVIDE                        | /        |
| DOUBLE SIGNED BINARY DIVIDE                 | /L       |
| BCD DIVIDE                                  | /B       |
| DOUBLE BCD DIVIDE                           | /BL      |

## Conversion Instructions

| Instruction                 | Mnemonic |
|-----------------------------|----------|
| BCD-TO-BINARY               | BIN      |
| DOUBLE BCD-TO-DOUBLE BINARY | BINL     |
| BINARY-TO-BCD               | BCD      |
| DOUBLE BINARY-TO-DOUBLE BCD | BCDL     |
| 2'S COMPLEMENT              | NEG      |
| DATA DECODER                | MLPX     |
| DATA ENCODER                | DMPX     |
| ASCII CONVERT               | ASC      |
| ASCII TO HEX                | HEX      |

## Logic Instructions

| Instruction         | Mnemonic |
|---------------------|----------|
| LOGICAL AND         | ANDW     |
| DOUBLE LOGICAL AND  | ANDL     |
| LOGICAL OR          | ORW      |
| DOUBLE LOGICAL OR   | ORWL     |
| EXCLUSIVE OR        | XORW     |
| DOUBLE EXCLUSIVE OR | XORL     |
| COMPLEMENT          | COM      |
| DOUBLE COMPLEMENT   | COML     |

## Special Math Instructions

| Instruction        | Mnemonic |
|--------------------|----------|
| ARITHMETIC PROCESS | APR      |
| BIT COUNTER        | BCNT     |

## Floating-point Math Instructions

| Instruction                | Mnemonic        |
|----------------------------|-----------------|
| FLOATING TO 16-BIT         | FIX             |
| FLOATING TO 32-BIT         | FIXL            |
| 16-BIT TO FLOATING         | FLT             |
| 32-BIT TO FLOATING         | FLT L           |
| FLOATING-POINT ADD         | +F              |
| FLOATING-POINT SUBTRACT    | -F              |
| FLOATING-POINT DIVIDE      | /F              |
| FLOATING-POINT MULTIPLY    | *F              |
| Floating Symbol Comparison | LD, AND, OR+=F  |
|                            | LD, AND, OR+<>F |
|                            | LD, AND, OR+<F  |
|                            | LD, AND, OR+<=F |
|                            | LD, AND, OR+>F  |
| FLOATING- POINT TO ASCII   | FSTR            |
| ASCII TO FLOATING-POINT    | FVAL            |

## Table Data Processing Instructions

| Instruction    | Mnemonic |
|----------------|----------|
| SWAP BYTES     | SWAP     |
| FRAME CHECKSUM | FCS      |

## Data Control Instructions

| Instruction                 | Mnemonic |
|-----------------------------|----------|
| PID CONTROL WITH AUTOTUNING | PIDAT    |
| TIME-PROPORTIONAL OUTPUT    | TPO      |
| SCALING                     | SCL      |
| SCALING 2                   | SCL2     |
| SCALING 3                   | SCL3     |
| AVERAGE                     | AVG      |

## Subroutine Instructions

| Instruction       | Mnemonic |
|-------------------|----------|
| SUBROUTINE CALL   | SBS      |
| SUBROUTINE ENTRY  | SBN      |
| SUBROUTINE RETURN | RET      |

## Interrupt Control Instructions

| Instruction        | Mnemonic |
|--------------------|----------|
| SET INTERRUPT MASK | MSKS     |
| CLEAR INTERRUPT    | CLI      |
| DISABLE INTERRUPTS | DI       |
| ENABLE INTERRUPTS  | EI       |

## High-speed Counter and Pulse Output Instructions

| Instruction                     | Mnemonic |
|---------------------------------|----------|
| MODE CONTROL                    | INI      |
| HIGH-SPEED COUNTER PV READ      | PRV      |
| COMPARISON TABLE LOAD           | CTBL     |
| SPEED OUTPUT                    | SPED     |
| SET PULSES                      | PULS     |
| PULSE OUTPUT                    | PLS2     |
| ACCELERATION CONTROL            | ACC      |
| ORIGIN SEARCH                   | ORG      |
| PULSE WITH VARIABLE DUTY FACTOR | PWM      |

## Step Instructions

| Instruction | Mnemonic |
|-------------|----------|
| STEP DEFINE | STEP     |
| STEP START  | SNXT     |

## I/O Unit Instructions

| Instruction              | Mnemonic |
|--------------------------|----------|
| I/O REFRESH              | IORF     |
| 7-SEGMENT DECODER        | SDEC     |
| DIGITAL SWITCH INPUT     | DSW      |
| MATRIX INPUT             | MTR      |
| 7-SEGMENT DISPLAY OUTPUT | 7SEG     |

## Serial Communications Instructions

| Instruction | Mnemonic |
|-------------|----------|
| TRANSMIT    | TXD      |
| RECEIVE     | RXD      |

## Clock Instructions

| Instruction       | Mnemonic |
|-------------------|----------|
| CALENDAR ADD      | CADD     |
| CALENDAR SUBTRACT | CSUB     |
| CLOCK ADJUSTMENT  | DATE     |

## Failure Diagnosis Instructions

| Instruction          | Mnemonic |
|----------------------|----------|
| FAILURE ALARM        | FAL      |
| SEVERE FAILURE ALARM | FALS     |


## Other Instructions

| Instruction               | Mnemonic |
|---------------------------|----------|
| SET CARRY                 | STC      |
| CLEAR CARRY               | CLC      |
| EXTEND MAXIMUM CYCLE TIME | WDT      |


## Dimensions

### CP1E CPU Unit


#### ●CPU Units with 20 I/O Point

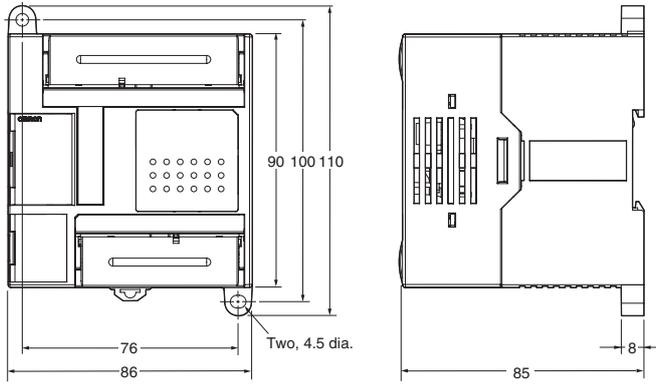

#### ●CPU Units with 30 I/O Point

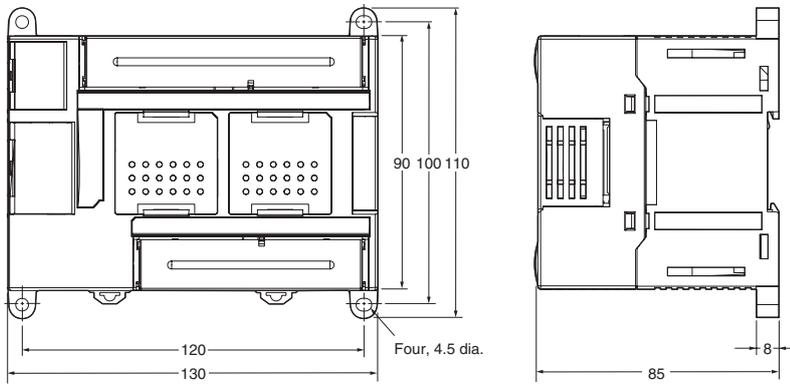


#### ●CPU Units with 40 I/O Point

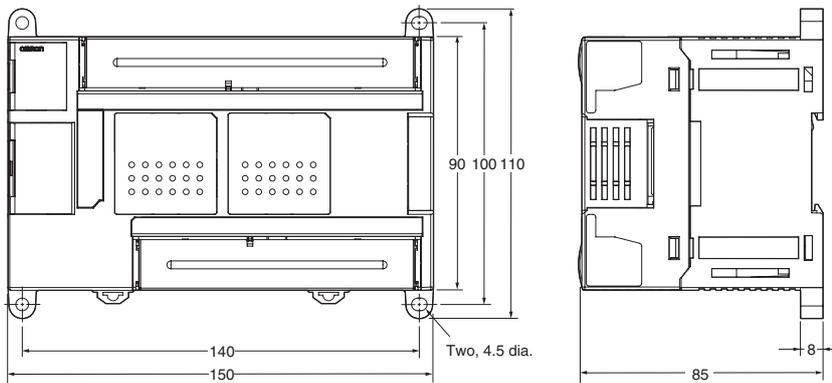


# CP1E-E□D□-A/CP1E-N□D□-□

## Expansion I/O Units and Expansion Units


### ●CP1W-8E□□/CP1W-SRT21

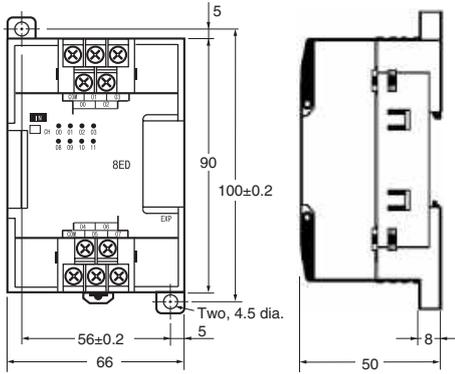

### ●CP1W-20ED□/CP1W-16E□□/CP1W-AD041/CP1W-DA041/CP1W-MAD11/CP1W-TS□□□

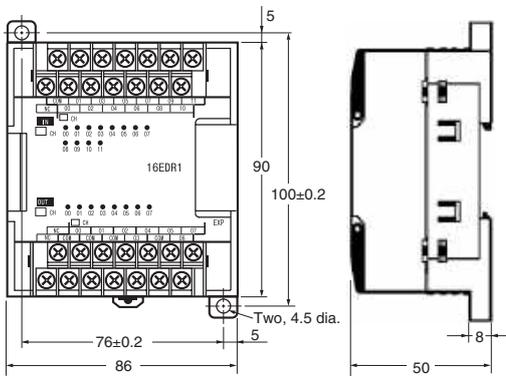

### ●CP1W-40ED□/CP1W-32E□□

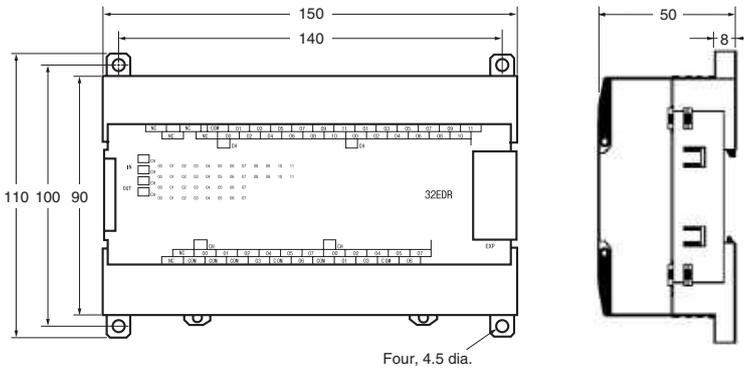

## Related Manuals

| Manual name  | Cat. No. | Model numbers   | Application  | Contents   |
|--|----------|---|--|--|
| SYSMAC CP Series CP1E CPU Unit Hardware Manual               | W479     | CP1E-E□D□-A<br>CP1E-N□D□-□  | To learn the hardware specifications of the CP1E PLCs  | Describes the following information for CP1E PLCs. <ul style="list-style-type: none"> <li>• Overview and features</li> <li>• Basic system configuration</li> <li>• Part names and functions</li> <li>• Installation and settings</li> <li>• Troubleshooting</li> </ul>   |
|  |          |   | Use this manual together with the CP1E CPU Unit Software Manual (Cat. No. W480) and CP1E CPU Unit Instructions Reference Manual (Cat. No. W483).   |  |
| SYSMAC CP Series CP1E CPU Unit Software Manual               | W480     | CP1E-E□D□-A<br>CP1E-N□D□-□  | To learn the software specifications of the CP1E   | Describes the following information for CP1E PLCs. <ul style="list-style-type: none"> <li>• CPU Unit operation</li> <li>• Internal memory</li> <li>• Programming</li> <li>• Settings</li> <li>• CPU Unit built-in functions</li> <li>• Interrupts</li> <li>• High-speed counter inputs</li> <li>• Pulse outputs</li> <li>• Serial communications</li> <li>• Other functions</li> </ul> |
|  |          |   | Use this manual together with the CP1E CPU Unit Hardware Manual (Cat. No. W479) and CP1E CPU Unit Instructions Reference Manual (Cat. No. W483).   |  |
| SYSMAC CP Series CP1E CPU Unit Instructions Reference Manual | W483     | CP1E-E□D□-A<br>CP1E-N□D□-□  | To learn programming instructions in detail  | Describes each programming instruction in detail.<br>When programming, use this manual together with the CP1E CPU Unit Hardware Manual (Cat. No. W479) and CP1E CPU Unit Software Manual (Cat. No. W480).  |
| CS/CJ/CP/NSJ Series Communications Commands Reference Manual | W342     | CS1G/H-CPU□□H<br>CS1G/H-CPU□□-V1<br>CS1D-CPU□□H<br>CS1D-CPU□□S<br>CS1W-SCU□□-V1<br>CS1W-SCB□□-V1<br>CJ1G/H-CPU□□H<br>CJ1G-CPU□□P<br>CJ1M-CPU□□<br>CJ1G-CPU□□<br>CJ1W-SCU□□-V1 | To learn communications commands for CS/CJ/CP/NSJ-series Controllers in detail   | Describes 1) C-mode commands and 2) FINS commands in detail.<br>Read this manual for details on C-mode and FINS commands addressed to CPU Units.   |
|  |          |   | <b>Note:</b> This manual describes commands addressed to CPU Units. It does not cover commands addressed to other Units or ports (e.g., serial communications ports on CPU Units, communications ports on Serial Communications Units/Boards, and other Communications Units). |  |
| SYSMAC CP Series CP1L/CP1E CPU Unit Introduction Manual      | W461     | CP1L-L10D□-□<br>CP1L-L14D□-□<br>CP1L-L20D□-□<br>CP1L-M30D□-□<br>CP1L-M40D□-□<br>CP1L-M60D□-□<br>CP1E-E□D□-A<br>CP1E-N□D□-□  | To learn the basic setup methods of the CP1L/CP1E PLCs   | Describes the following information for CP1L/CP1E PLCs. <ul style="list-style-type: none"> <li>• Basic configuration and component names</li> <li>• Mounting and wiring</li> <li>• Programming, data transfer, and debugging using the CX-Programmer</li> <li>• Application program examples</li> </ul>  |



## Read and Understand this Catalog

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

## Warranty and Limitations of Liability

### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## Application Considerations

### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the product in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

## Disclaimers

### CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

### DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

**Note: Do not use this document to operate the Unit.**

**OMRON Corporation**  
Industrial Automation Company  
Control Devices Division H.Q.  
Automation & Drive Division  
Automation Department 1

Shiokoji Horikawa, Shimogyo-ku,  
Kyoto, 600-8530 Japan  
Tel: (81) 75-344-7084/Fax: (81) 75-344-7149

**Regional Headquarters**

**OMRON EUROPE B.V.**  
Wegalaan 67-69-2132 JD Hoofddorp  
The Netherlands

Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON Industrial Automation Global: [www.ia.omron.com](http://www.ia.omron.com)

**OMRON ELECTRONICS LLC**  
One Commerce Drive Schaumburg,  
IL 60173-5302 U.S.A.  
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

**OMRON ASIA PACIFIC PTE. LTD.**  
No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark, Singapore 119967  
Tel: (65) 6835-3011/Fax: (65) 6835-2711

**OMRON (CHINA) CO., LTD.**  
Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China  
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

**Authorized Distributor:**

© OMRON Corporation 2009 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.

Cat. No. P061-E1-02

CSM\_1\_1\_0609

Printed in Japan  
0609 (0309)